

INSTALLATION INSTRUCTIONS

1. Apply thread tap or other approved sealant to the pipe/ thread.
2. Assembly flange into wall elbow then screw the wall elbow onto the pipe, ensuring it is tight, flush with the wall, and that outlet is perpendicular underneath the wall elbow.
3. Fit the hose to the connector ensuring the filter/washer is inserted.
4. Fit the hose to the shower head ensuring the filter/washer is inserted and the flow controller is inserted with the protruding side into the shower head taking care not to damage the flow controller.

These showers may not be suitable for use with gravity fed water heaters, low and unequal pressure supply networks, instantaneous water heaters, tempering valves and/or thermostatic mixing valves.

The following pressure range should be complied with:

- ☐ **Minimum** working pressure: 150kpa
- ☐ **Maximum** working pressure: 750kpa

All ABEY SHOWERS MUST BE INSTALLED IN ACCORDANCE WITH AS/NZS 3500 SERIES.

Cerified in accordance with AS/NZS 3662, Licence number WM-022641.

