

Shower Mixer

INSTALLATION INSTRUCTIONS



Abey Australia Pty Limited
 57-81 Abey Road
 Cobblebank 3338
 PHONE: 03 9747 7777

Care and Maintenance

The materials and workmanship of the tapware is of high quality and in order to maintain its appearance, it is important not to wipe with abrasive cleaners. Cleaning of this product should only be done with warm soap water on a regular basis.

Working Specifications

Maximum : Temperature - 80°C
 Pressure - 500kpa

Where normal working pressures exceed the maximum stated above, pressure limiting valve should be installed as excessive pressure may damage the tap and void warranty.


Minimum : Temperature - 1°C
 Pressure - 150 kpa
 Recommended operating pressure: 150 to 500kpa.

NOTE:
 This mixer must be installed with isolating stop taps in accordance with local authority installation codes. All Abey mixers must be installed by a licensed plumber, failure to do so may void warranty. This tap is manufactured to standard AS/NZS 3718. All Abey tap ware must be installed in accordance with AS/NZS 3500 series.

Notice

- 1 All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow .
- 2 Aerator insert housing must be retightened to prevent removal by hand.

Mixer without diverter: 45mm to 65mm

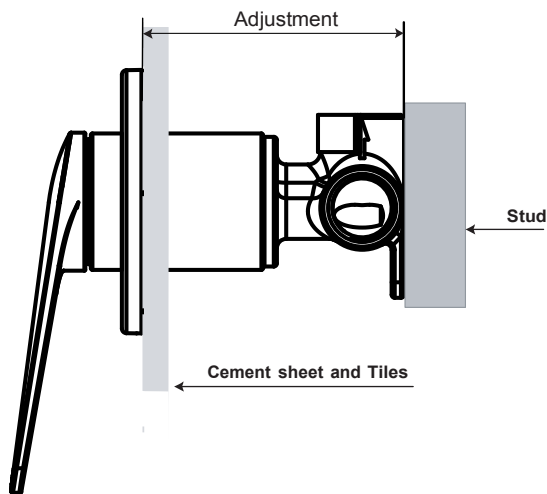

1
 Attach water supply and water outlet
TEST AND CHECK FOR LEAKS

Do not remove the protective cover until final fit-off

2
 Screw the shower mixer set in place

3
 Create a 50mm round hole in cement sheet and tiles.

Remove the protective cover. And push on the cover plate.

Cover Plate

4
 Push on the mixer handle and tighten with the grub screw.