


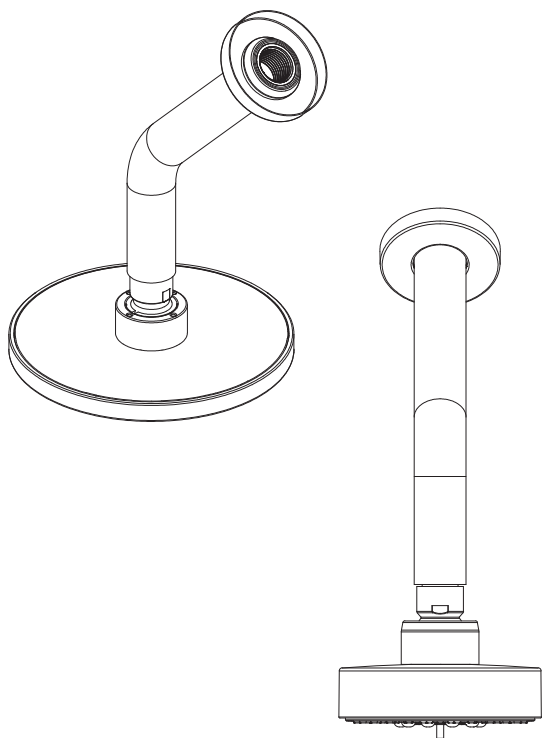

INSTALLATION INSTRUCTIONS

1. Apply thread tap or other approved sealant to the ceiling/wall spigot/nipple. Insert the wall plate over the arm/dropper and then install the arm/dropper onto the spigot, ensuring it is tight and flush with the wall/ceiling and that the arm outlet is perpendicular/vertical.
2. Fit the filter/washer and flow controller into the shower head in the connection between the shower head and the arm/dropper.
3. The flow controller should be inserted with the protruding side into the shower head, taking care not to cause any damage to the flow controller.
4. Fit the shower head onto the arm/dropper, ensuring it is firmly tightened to prevent leaks.
5. The shower head can be adjusted by swivelling into the desired position.

These showers may not be suitable for use with gravity fed water heaters, low and unequal pressure supply networks, instantaneous water heaters, tempering valves and/or thermostatic mixing valves.

Working Specification:

Maximum:	Temperature	-	70 °C
	Working pressure	-	500kpa
Minimum:	Temperature	-	1 °C
	Working pressure	-	150kpa

AII ABEY SHOWERS MUST BE INSTALLED IN ACCORDANCE WITH AS/NZS 3500 SERIES.

Cerified in accordance with AS/NZS 3662, Licence number WM-022641.

材质 80g双
印刷颜色 正
单张尺寸(m
开数 16
张数 1
折叠后尺寸
折页方式 对
版本 A
发图时间
设计人员
修改记录 -
库存处理方
发图时间 20
设计人员 黄