 


## Contents

Please read this instruction manual carefully to ensure the correct and safe use of Joyoung unmanned blender Soybean milk machine.

This product is for home use only.

Pay special attention to "note" (pages 08-09)

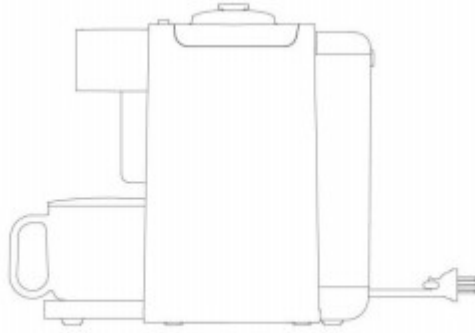

## Spare parts list



Coffee strainer



 
Measuring glass




Cleaning brush

Before use	
1. Product introduction	03
2. Client APP	04
When in use	
3. Operation Guide	04
<b>Nourishing</b>	04
Classic menu	05
Reservation	05
4. Cleaning	06
Cleaning	06
Encounter problems	
7. Troubleshooting	07
8. Fault Code	07
9. Precautions	08
10. Basic Parameters	09
11. Statement of Harmful Substances	10
12. Warranty card	10

Product introduction

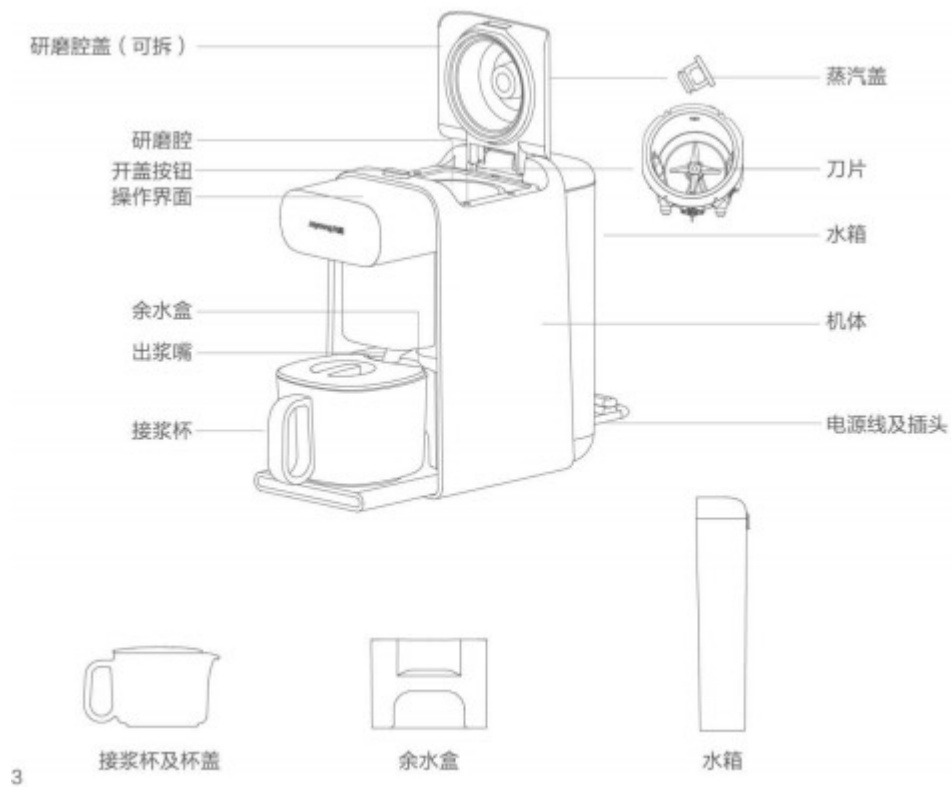

研磨腔盖 (可拆)	Grinding chamber cover (removable)
研磨腔	Grinding chamber
开盖按钮	Open cover button
操作界面	Operating interface
余水盒	Residual water box
出浆嘴	Slurry outlet
接浆杯	Receiving cup
蒸汽盖	Steam cover
刀片	Blade
水箱	Water tank
机体	Body
电源线及插头	Power cord and plug

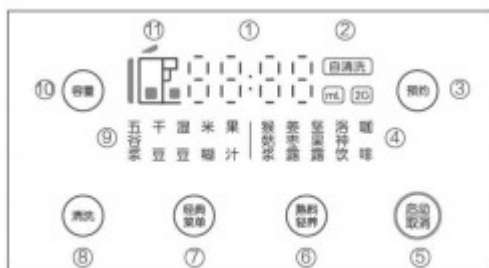 

1.LED Time/Capacity Display	7. Classic menu selection button
2. Status display	8. Clean the key and press it for a long time to enter maintenance.
3. Reservation button	9. Classic menu
4. Nourishing Menu	10. Capacity Selection Button
5. Start/Cancel Key	11. Abnormal prompt (red light shows abnormal)
6. <b>Nourishing</b> menu selection button	

## Client APP

Scan the body two-dimensional code and associate with intelligent equipment.

Open WeChat to scan, scan the body two-dimensional code, and follow the prompts on the mobile phone screen.

The machine can perform firmware upgrade remotely. During the upgrade process, the operation interface is unresponsive and the machine cannot enter the making process. After the upgrade is completed, the machine resumes normal operation.

## Operation guide

### 1. Add ingredients and water

Open the grinding chamber and add food materials (the "**nourishing**" is made of material bags, and the "classic menu" please add food materials according to the instruction amount); Open the water tank and add water (be sure to use purified water) above the water level of the required making quantity. Close the grinding chamber cover and the water tank cover and place the receiving cup.

### 2. Menu selection

Touch and press the button of "nourishing" or "classic menu" to select the required menu, which will flash after selection. Each time, the menu switches from left to right (when making coffee, be sure to place the filter screen in the cup). At the beginning, it defaults to the last function used.

### 3. Capacity Selection

Touch and press the "Capacity" button to select the capacity corresponding to the material package, and the LED screen will display it.

For each press, the menu switches from 800mL, 1000mL, 3000mL, 500mL in turn (only 500mL can be selected for financial criticism; After selecting the juice function, no capacity selection is required).

The default capacity is 500mL.

### 4. Start making

Touch and press the "Start" button to start making; Within 1 minute, press again to cancel the current menu making and reselect.

### 5. Automatic cleaning

After the production is completed, the machine will automatically enter the cleaning program without starting the "cleaning" button. At this time, please do not take out the remaining water box, but the receiving cup can be freely taken, and waste water will be poured in time after the cleaning is completed.

1. For the classic menu, please add ingredients according to the instruction to avoid overflow, jam of the outlet and poor crushing.
2. When selecting juice function, do not put too much fiber material to avoid jam of the outlet.
3. The coffee filter screen can only be used for coffee functions. Other functions disable the filter screen to avoid overflow.

## Nourishing

In addition to the coffee function on the menu, other functions must be made of material bags.

Classic menu

Function	Recipe	Food quantity
Dried beans	Dried soybean milk	300 ml: 3/10 cup of dried soybean about 25g 500 ml: 2/5 cup of dried soybean about 35g 800 ml: 7/10 cups of dried soybean about 55g 1000 ml: 4/5 cup of dried soybean about 70g
Wet beans	Wet soybean milk	300 ml: 2/5 cup soybean (fully soaked) about 30g 500 ml: 1/2 cup soybean (fully soaked) about 40g 800 ml: 7/10 cup soybean (fully soaked) about 55g 1000 ml: 1 cup of soybean (fully soaked) about 80g
Grain soybean milk	Rice moistens grain	300 ml: 1/5 cup of dry soybean about 15g and 1/10 cup of rice about 10g 500 ml.: 3/10 cup of dried soybean about 20g, 3/10 cup of rice about 20g 800 ml: 2/5 cup of dried soybean about 30g, 2/5 cup of rice about 30g 1000 ml: 1/2 cup of dry soybean about 40g, 1/2 cup of rice about 40g
Rice paste	Pure rice paste	300 ml: 3/10 cups of rice about 30g 500 ml: 2/5 cup rice about 50g 800 ml: 3/5 cup rice about 70g 1000 ml: 4/5 cup rice about 80g
Fruit juice	Pear juice	3 cups of pears (peeled, denucleated and diced) about 250g
	Strawberry juice	Strawberry 3 cups (chopped) about 250g
Coffee	Coffee	300mL: 1/5 cup of coffee beans about 15g 500mL: 3/10 cups of coffee beans about 25g

## Reservation function

### 1. Add ingredients and water

Opening the grinding cavity and adding food materials; Open the water tank, add water above the water level of the required making quantity, close the grinding chamber cover and the water tank cover, and place the receiving cup.

### 2. Menu selection

Touch to select the menu you want to make an Reservation. If you do not select, the last Reservation function will be defaulted.

Wet beans, juice function cannot be reserved.

### 3. Capacity Selection

Touch "Capacity" and press the key to select the desired capacity, which is 500mL by default.

### 4. Time selection

Touch "Reservation" to press the key and select the desired time. Each time you press the key, the time increases by 30 minutes. Reservations can be made for 0.5-24 hours.

When the "Reservation" key 3S is pressed for a long time, the time display will fast forward and release the key when the required reservation time is reached.

The default is 08: 00, which means making will be completed in 8 hours.

### 5. Start making

Touch and press the "Start" button to start the countdown; Within 1 minute, press again to cancel the current menu making and reselect.

## Cleaning and maintenance

### Cleaning of grinding chamber

#### 1. Menu selection

Touch and press the "Clean" button, and the LED screen will show the time required for cleaning.

#### 2. Start cleaning

 
Touch and press the "Start" button to start the countdown to cleaning; Within 1 minute, press again to cancel the current menu making and reselect.

## Maintenance

After using for a period of time, oily materials will scale and stain on the grinding chamber and the blade. A special detergent for soybean milk machine (available online) will be added into the grinding chamber. Press the "Clean" button for 5 seconds. The LED screen will show the time required for cleaning, and the machine will perform boundary protection cleaning.



Cleaning  
accessories

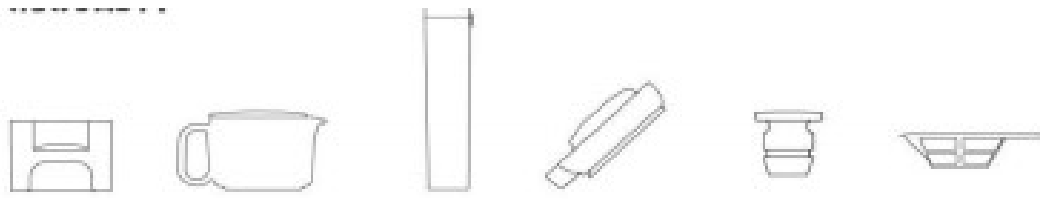

Residual water box	Receiving cup and cup cover	Water tank	Grinding chamber cover	Steam cover	Coffee strainer
-----------------------	--------------------------------	---------------	---------------------------	-------------	--------------------

1. The above 6 accessories can be removed from the machine and washed under the faucet.
- 2 When the slurry discharge valve is blocked due to too much material, first place the concentrated test material in the grinding chamber, manually dredge the slurry discharge pipe, and then clean it according to the "cleaning" function.
3. When using the coffee watching function, after the automatic cleaning is completed, if residue is found on the steam cover, the grinding chamber cover and the steam cover can be removed and washed with water.
4. After the machine parts are cleaned, it is recommended to dry them or air dry them and assemble them into a complete machine and store them in a dry and ventilated place.

### Debugging

Fault	Reason statement	Countermeasures
The indicator light is not on.	The power cord is not plugged to the bottom.	Plug the power cord to the bottom
	Failure of machine display panel	Send it to the local after-sales service department for repair.
	No function program selected	Select the corresponding function program
The indicator light is on, and the machine cannot be replaced.	The water tank is not filled with water or is not in place.	The water tank is filled with water to the water level scale line and placed in place.
	Temperature sensing crying or water level electrode failure	Send it to the local after-sales service department for repair.
The grinding chamber does not enter water.	Abnormal water pump	Send it to the local after-sales service department for repair.
	Stupid bottom filter disc blocked	Take out the filter disc from the bottom of the water tank, clean it and put it back in its original state.
The motor does not stop working.	Water entering the machine	Send it to the local after-sales service department for repair.
Heating is not stopped.	Abnormal temperature sensor	Send it to the local after-sales service department for repair.
No response to key press	The power-off interval is short and the system is reset at the end.	Turn off the power for 2 minutes before using it.
	Display panel key failure	Send it to the local after-sales service department for repair.
The ingredients will not break.	Too many or too few ingredients	Add ingredients according to the requirements of the recipe in the manual.
	Machine body failure	Send it to the local after-sales service department for repair.
	Error selecting function program	Correct Selection of Function Program

Fault	Reason statement	Countermeasures
Spill slurry	Error selecting function program	Correct Selection of Function Program
	Too many ingredients or too much food volume	Add ingredients according to the recipe in the instruction manual.
	Machine body failure	Send it to the local after-sales service department for repair.
Paste pot	The grinding chamber is not cleaned	Clean the grinding chamber before use.
	Too many ingredients are added	Please add ingredients according to the recipe.
Drink processing time is too long, others are	Water temperature is too low	Use room temperature friends
	Error selecting function program	Correct Selection of Function

normal		Program
The slurry is not normally discharged into the slurry receiving cup.	According to the cup is not in place	Place the paste receiving mark in place
	The discharge valve itself is abnormal.	Send it to the local after-sales service department for repair.
Waste water is not discharged into the residual water box	The remaining water box is not in place.	Place the remaining water box in place.
	The receiving cup is not in place.	Send it to the local after-sales service department for repair.
	The discharge valve itself is abnormal.	Send it to the local after-sales service department for repair.
Abnormal whistle	Machine running-in	Occasionally whistle sounds are normal

#### Fault code

Error reporting prompt: the digital display tube reports an error indication, all other indicator lights are off, and the buzzer sounds

Exception code	Reason statement	Suggested countermeasures
E01	The receiving cup is not in place.	Check whether the receiving cup is in place
E02	Water is added into the water tank to clean the water tank at the water level scale line	There is no water in the water tank or the filter disc at the bottom of the water tank blocks the grinding chamber cover. The grinding chamber cover is not installed or not in place.
E03	Bottom filter disc	Check whether the grinding chamber cover is not tightly closed

Exception code	Reason statement	Suggested countermeasures
E04	The remaining water box is not in place or the waste water in the remaining water box is not poured clean.	Confirm that the remaining water box is in place/pour the waste water in the remaining water box clean.
E05	Excessive materials overload the motor.	Reduce the amount of materials, clean up the machine and rebuild it.
E06	The upper water level electrode is stuck or too much material is placed.	Clean the electrodes or reduce the amount of materials.

Exception code	Reason statement	Suggested countermeasures
E07	Abnormal voltage signal	Check whether the voltage is lower than 160V or higher than 260V/ use regulated power supply.
E08	Abnormal internal communication interface	Send it to the local after-sales service department for repair.
E09	Abnormal internal communication interface	Send it to the local after-sales service department for repair.
E10	Blocking of slurry discharge valve or foreign matter jam	Clean the slurry discharge valve or cut off power for cleaning, or send it to the local after-sales service department for maintenance.
E11	Temperature sensor detection circuit failure	Send it to the local after-sales service department for repair.

Exception code	Reason statement	Suggested countermeasures
E12	Grinding chamber temperature sensor	Maintenance by local

	detection Circuit fault	after-sales service department
E13	Flowmeter failure	Maintenance by local after-sales service department
E14	Zero crossing signal lost	Maintenance by local after-sales service department
E15	The heating of the pulverizing chamber is overtime.	Maintenance by local after-sales service department

Warm Tip: If the problem cannot be solved, do not disassemble the machine without permission, please send it to the local after-sales service for repair. If the above contents are not in conformity with the actual object due to the change of model or parts, please take the actual object as the standard without further notice, please explain in detail!

Matters needing attention



- In order to prevent personal injury and property loss, please observe the following safety precautions.

**警告**  
表示如不可避免，则可能导致死亡或严重伤害的某种潜在危害情况

  
表示“禁止”，不能进行的内容。

**注意**  
表示如不可避免，则可能导致轻微中度伤害的某种潜在危害情况

  
表示“强制”，务必执行的内容。

<div>Warning</div> <div>Indicates a potential hazardous situation that may lead to death or serious injury if not avoided.</div>	<div>pay attention to</div> <div>Indicates a potential hazardous situation that may lead to slight or moderate injury if not avoided.</div>
<div></div> <div>It means "forbidden" and cannot be carried out.</div>	<div></div> <div>It means "mandatory" and must be implemented.</div>

#### Warning

- This product is not designed for use by people with physical, sensory or mental deficiencies (including children), or people who lack experience and knowledge. Use this product only if there is supervision or guidance from people who can ensure their safety. Please be careful not to let children play with this product.
- Please use a three-socket socket and ensure reliable grounding. Be sure to choose a power outlet with rated current of 10A and AC voltage of 220V v.
- Be sure to insert the power plug to the end. If it is not fully inserted, it may cause a fire accident due to electric shock or overheating.
- Do not damage the power cord or power plug or socket. Never do the following to the power cord: refit, bend, stretch, place at high temperature, place heavy objects on it or bundle them into a bundle. When the power cord is damaged, please repair or replace it at the designated after-sales service point in Joyoung.
- Do not use it for purposes other than those stated in the manual.
- Never attempt to modify, disassemble or repair this product automatically.
- Do not immerse the product in water or let the water spray.
- No external force is allowed to act on the outlet to avoid machine damage.
- Prohibit mangoes, licorice and other food materials with too much fiber, so as not to jam the and damage the machine.
- It is forbidden to place non-self-contained receiving cups in the round groove of the base to prevent the machine from being damaged due to the interference of the cup mouth with the operation of the outlet.

pay attention to

- Do not open the lid during making.
- When the room temperature is higher than 30°C, the reservation time should not exceed 12 hours.
- It is strictly prohibited to place the paste cup on open fire or induction cooker for heating.
- making is completed. The temperature of the receiving cup, outlet, grinding chamber and upper cover of grinding chamber are relatively high. Do not touch them directly by hand.
- Please select the cleaning function in the main interface when there are unmelted food materials to be discharged from the grinding chamber.
- Please add materials strictly according to the recipe when making drinks.
- Do not cut off power when cleaning automatically.
- During reservation, compared with the standard reservation time, the alarm time after purple making is normal with slight error and does not affect making quality. (Reserved models only)
- During making, do not forcibly take away the receiving cup.
- Do not drink the beverage if the power is abnormally cut off for more than 30 seconds.
- Be careful that the blade hurts your hand when cleaning and grinding the control manually.
- Please ensure that the remaining water box is in place before automatic cleaning.
- After charging the grinding chamber, please clean up the ingredients around the chamber to avoid sealing.
- Please use purified water for making.
- Colored food is pulped and may be dyed.
- Never add water to the grinding chamber when making drinks.
- This product is only used in areas below 2000 meters above sea level in mainland China.
- For nuclear ingredients, please go to nuclear making.
- making time will be adjusted automatically according to altitude and voltage. After cleaning, open the grinding chamber cover and dry the water.

Use tips

- Soymilk must be cooked and drunk.
- Please drink it as soon as possible after the cooking is finished to maintain the fresh taste.
- Low-concentration soybean milk or reduced drinking should be selected as appropriate for infants, people with renal failure and people with weak gastrointestinal function.



#### Information on food contact materials

Please use this product normally according to the instructions. This product meets the requirements of the corresponding national food safety standards. The conformity information of food contact materials and their implementation standards is as follows:

	Materials for food contact	Implementation standard	Compliance with standards
Metal	Aluminium alloy EN601 (heating cup assembly)	GB4806.9-2016	Qualified
	Stainless steel 12Cr17Ni17 (blade)	GB 4806.9-2016	Qualified
	Stainless steel 14Cr17Ni12 (motor shaft)	GB 4806.9-2016	Qualified
	Stainless steel 06Cr19Ni1 (screws, temperature sensors, etc.)	GB 4806.9-2016	Qualified
Plastic	AS (water tank, residual water box, etc.)	GB 4806.7-2016	Qualified
	POM	GB4806.7-2016	Qualified
	PTFE (moving valve plate)	GB 4806.7-2016	Qualified
	PPE (reversing valve cover, upper cover 2, cup body, fixing frame, etc.)	GB 4806.7-2016	Qualified
	PCTG (cup lid)	GB 4806.7-2016	Qualified
Glass	High Borosilicate 3.3 (Cup, Glass Cover)	GB4806.5-2016	Qualified
Ceramics	Ceramic (static valve plate 1, static valve plate 2)	GB 4806.4-2016	Qualified
Rubber (gaskets, etc.)		GB4806.11-2016	Qualified

● This series of products contain the above food contact materials. Some models may not contain individual materials, and the actual products shall prevail!

#### Basic parameter

- Rated voltage: 220V
- Rated frequency: 50Hz

Product model	Rated power/ Motor power	Capacity range	Net weight	Product size (length × width × height)
DJ10R-K1 DJ10E-K61 DJ10R-K1×	1150W/210W	300mL~1000mL	5.8kg	412mmx165mm×360mm

Usage standard: GB4706.1-2005, GB4706.19-2008, GB4706.30-2008

The use of identification cards for hazardous substances is restricted.

#### Names and Contents of Harmful Substances


Part name	Harmful substance					
	Lead	Mercury (Hg)	Cadmium (Cd)	Six prices (Cr(VI))	Polybrominated biphenyl (PBB)	Polybrominated diphenyl ether (PBDE)
Rubber parts (gaskets, shaft seals, etc.)	○	○	○	○	○	○
Temperature sensor	○	○	○	○	○	○
Stainless steel structural parts (steel cup, metal lower cover, motor shaft, etc.)	○	○	○	○	○	○
Standard parts in contact with food (cover screws, lock blade nuts, etc.)	○	○	○	○	○	○
electrode	○	○	○	○	○	○
Non-flame retardant plastic structural parts (shell, decorative parts, etc.)	○	○	○	○	○	○
electric heater	○	○	○	○	○	○
Thermostat	○	○	○	○	○	○
Other metal structural members ( housings, etc.)	○	○	○	○	○	○
Flame retardant plastic structural parts (motor bracket socket, glow connector, etc.)	○	○	○	○	○	×
Other standard parts (locking handle screws, etc.)	○	○	○	×	○	○
Motor, power cord, printed circuit board assembly (PCB, capacitor, transformer, wire harness, etc.)	×	○	○	○		×

O: Indicates that the content of the harmful substance in all homogeneous materials of the component is in GB/T26572

Under the prescribed limit.

X: indicates that the content of the toxic and harmful substances in at least one homogeneous material of the component exceeds the limit requirements specified in GB/T26572. The "x" parts show that due to the current global technology and technological level restrictions, it is impossible to completely replace non-environmental protection substances or elements. The following will be improved gradually with technological improvement.

\*: Indicates that only some models contain this part.

 <p>Signs of Restricting Use of Harmful Substances</p>	<p>The environmental protection use limit is 10 years: it means that the harmful substances contained in this product will not leak or mutate, and the normal use of this product by users under the conditions described in the product specification will not cause serious environmental damage or personal injury. Time limit for serious damage to property.</p> <p>Arrow circle mark: indicates that this product can be recycled. After exceeding the service life or unable to work normally after maintenance, they should not be discarded. Please hand them over to regular recycling channels and enterprises qualified to dispose of discarded electrical and electronic products. For the correct disposal methods, please refer to the relevant national or local regulations on disposal of used electrical and electronic products.</p>
-----------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

- The above marks are required to be implemented according to China's management measures for the use of harmful substances and its supporting standard SJ/T11364. Long-term use of this product will not cause harm to human body, please feel free to use it.

#### After-sales service term of service

- This product is subject to the national new three guarantees, and the whole machine is guaranteed for one year. The validity period of the Three Guarantees shall be calculated from the date of issuing the invoice. The three guarantees are for family use only.
- The machine invoice is regarded as the three guarantees certificate of the product.
- Joyoung users enjoy free cleaning, maintenance and testing services in the process of product service.

#### Non-Three Guarantees

- Product damage caused by improper handling, use, maintenance and storage by consumers;
  - The installation and maintenance of the repair points not designated by our company are suitable for damage (including those installed or dismantled and repaired by consumers themselves);
  - If there is no valid certificate of algae or purchase, and the certificate cannot be applied within the three-guarantee period;
  - Invoices are not in conformity with physical objects or altered;
  - Damage caused by irresistible natural disasters;
  - Exceeding the three-guarantee period;
  - If the operating environment (e.g. voltage, humidity, temperature, ventilation conditions, etc.) does not conform to the description in the product manual and is beyond the scope of Joyoung's door-to-door service, the customer requires the door to be opened.
- It is damaged.

#### Service outlet inquiry

- Please search for "Joyoung" in WeChat and pay attention to it. After entering, click "I" on the

lower right, and then select "Website Query" to enter the query.

- Please login to Joyoung network customer service center at <http://KF.joyoung.com> for inquiries.
- Please call Joyoung Sunshine Service Hotline: 400-6186-999 for inquiries.