

Cyrusher Technology Co., LTD.



Lankeleisi XT750 Cyrusher XF770

Folding Electric Bike User Manual

www.cyrusher.com

info@cyrusher.com

1.Remove packaging




Receive the package



Open the box



6 Get out of the box

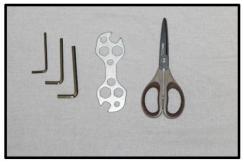

4 Prepare tools and components



6 Remove the packaging



6 Remove the front wheel

2. Assemle the handlebar



1 Loosen the bolt on top of stem



2 Loosen the bolt on side of stem



Turn stem 180 degree, to make sure it's forward





4 Tighten the bolt on top of stem 5 Tighten the bolt on side of stem



6 Release the bolt on handlebar cap



Take off the cap head



the central





• Fasten the screws tightly



Finish the handlebar assembling

3. Assembling headlights and fenders



1 Remove the screws from the fork and prepare to install the frontlight and fender



2 Screw on the frontlight and fender



6 Headlights and fenders are installed



4 Turn the bike upside down and remove the fork protector.



6 Release the quick release screws



6 Put the wheel in the front fork



Mounting with disc brake



8 Install the quick release



O Lock the quick release



Quick release installation completed

4. Assemle pedals



1 Separate left and right side pedals, WL for the left side, WR for the right



 
2 Install the correct side pedal to the crank arm



3 Fix it as tighten as possible

5.Assemle saddle







2 Fasten the saddle clamp



3 Make sure it's installed within the safety line

6.Finish the assemble!



Congratulations! You have finished the assemble.Ready to Ride!

How to fold



1 Find the frame folding clamp



Open the clamps



6 Fold the frame



Finish the folding

How to remove the battery



Turn the battery key for twice



8 Pull the battery



Unlock the battery



1 Take out the battery from the

Charging with battery in frame (1)



1 Connect charging to frame charging port and then connect to socket



When charging the light turns red



(3) When the battery is full, it turns green

Removing battery from frame, charging(2)





1 Remove the battery from frame when charging, the light turns red; when the battery is full, it turns green.








assistance, by full electric LOW, 10-12mph power

1.PAS0 means no power 2.PAS1 means speed level 3.PAS2 means speed

level, STANDARD, 12-14mph

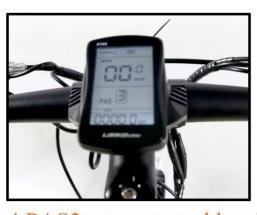





HIGH,14-16mph

4.PAS3 means speed level, 5.PAS4 means speed level, HIGH, 16-18mph

6.PAS5 means speed level HIGH,18-20mph



Tips:

PAS1-5 has its function only under PAS riding mode.

In ful electirc mode, without any pedaling, pis set it PAS0. Under PAS0, the speed can not changed by twisting throttle. (Maximum speed:20mph)

Pls understand that the speed here is for reference, the actual speed will be affected by rider weight, carrying weight, temperature, road situations, up-hilling, bike and battery status ect.



How to use display panel

1. Press M for 3 seconds to turn it ON.

2.Press M for 3 seconds to turn it OFF.

3. Press ▲ to increase the speed level (PAS 5 is the highest speed level).

4. Pass A for 3 seconds to switch the front

light.

5.Press ▼ for decrease the speed level.

(PAS0, there is no power assist)

6.Press ▼ for 3 seconds to enter low speed cruising mode, 3-4mph.



Serial number

You can find the unique bike serial bike serial number in the stem under the handlebar and find the bike type in the frame.

Bike serial number is very important. Pls find it and write into the warranty certificate and keep record to avoid theft.