



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Warning: Hot surfaces! Never touch the Cooking Surface or Cover while appliance is in use. Always lift and lower the Cover by the Cover Handle.
- DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Mini Maker Waffle is NOT dishwasher safe.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Mini Maker Waffle and its non-stick Cooking Surface.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- DO NOT use the Mini Maker Waffle near water or other liquids, with wet hands, or while standing on a wet surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.



IMPORTANT SAFEGUARDS

- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Be cautious when moving an appliance containing hot oils or other hot liquids.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Allow Mini Maker Waffle to cool completely before moving, cleaning, or storing.
- Close supervision is necessary when any appliance is used by or near children.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, **and when not in use.**
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the Mini Maker Waffle can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL

PARTS & FEATURES

USING YOUR WAFFLE MAKER



Before first use, remove all packaging material and thoroughly clean Waffle Maker.



Never touch the Cooking Surface or Cover while appliance is in use.



DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury.



Always lift and lower the Cover by the Cover Handle. Lift from the side.

USING YOUR WAFFLE MAKER



1. Place the appliance on a stable and dry surface. Plug the cord into a power outlet. The Indicator Light will illuminate, signaling that the Mini Maker Waffle is heating up.



2. Once the Cooking Surface reaches the optimal cooking temperature, the Indicator Light will automatically shut off. Now, you're ready to get cooking!



3. Carefully lift the Cover by the Cover Handle and spray both Cooking Surfaces with a little cooking spray.



4. Place food or pour batter onto the Cooking Surface and close the Cover.



5. Once food is cooked to your preference, carefully remove it from the Cooking Surface with a heat-resistant nylon or silicone cooking utensil. Do not use metal utensils to remove or place food on the Cooking Surface as this will damage the non-stick surface.



6. When you have finished cooking, unplug your Mini Maker Waffle and allow it to cool before moving or cleaning.

Removing the upper and lower baking trays: you need to press the baking tray lock button to remove the baking trays

Install the upper and lower baking pans: Align the grooves A of the upper and lower baking pans with the fixing slot B of upper and lower baking pans, and then press the baking pan

Note: When the baking pan needs to be replaced, the power plug must be unplugged. Allow the baking pan to cool before proceeding.

MAINTENANCE & CLEANING

Always allow the appliance to cool completely before moving, cleaning, or storing. Do not submerge appliance in water or any other liquids. Never use abrasive cleaning agents to clean your appliance as this may damage the Mini Maker Waffle.

In order to keep your Mini Maker Waffle in pristine working order, thoroughly clean the appliance after each use. This will prevent the build-up of food or oil.

- Unplug Mini Maker Waffle and allow it to cool completely.
- Using a damp, soapy cloth, wipe down the Cooking Surface and Cover. Thoroughly rinse the cloth and wipe again.
- Thoroughly dry Mini Maker Waffle before storing.
- If there is food burned onto the Cooking Surface, pour on a little cooking oil and let sit for 5 to 10 minutes. Scrub the Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Thoroughly rinse the cloth and wipe again. If any food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Mini Maker Waffle and its non-stick Cooking Surface.

TROUBLESHOOTING

While Hongxin products are durable, you may encounter one or more of the problems listed below. According to the following solutions, your problems will be solved easily and quickly.

1. **The light on the Mini Maker Waffle keeps shutting off.**
 - This is normal. During the cooking process, the heating element will automatically turn on and off to regulate the temperature and ensure that the Cooking Surface does not get too hot or cold. When this occurs, the Indicator Light turns on and off.
2. **How do I know when the Mini Maker Waffle is heated and ready to use?**
 - When the Waffle Maker reaches the optimal temperature, the Indicator Light shuts off and that means you're ready to get cooking!
3. **There is no On/Off Button. How do I turn the Mini Maker Waffle off and on?**
 - To turn on, simply plug in the power cord. When you're done cooking, turn off the Mini Maker Waffle by unplugging it.
4. **When using my Mini Maker Waffle, the Cover gets very hot. Is this normal?**
 - Yes, this is completely normal. When using your Waffle Maker, always lift and lower the Cover by the Cover Handle. To prevent personal injury, DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.

TROUBLESHOOTING

5. **After using my Mini Maker Waffle a few times, food is starting to stick to the surface. What is happening?**
 - There is probably a build-up of burnt food residue on the Cooking Surface. This is normal, especially when cooking with sugar. Allow the appliance to cool fully, pour on a little cooking oil and let sit for 5-10 minutes. Scrub Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Rinse the cloth and wipe again. If food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
6. **The Indicator Light will not turn on and the Cooking Surface is failing to heat.**
 - Ensure that the power cord is plugged into the power outlet.
 - Check to make sure the power outlet is operating correctly.
 - Determine if a power failure has occurred in your home, apartment or building.

