

Product manual



- | | | |
|------------------------|--------------------|-----------------|
| 1 Stove panel | 5 Temperature head | 9 Inlet |
| 2 Pot storage area | 6 Metal frame | 10 Metal frame |
| 3 Display area | 7 Power cable | 11 Power cable |
| 4 Touch operation area | 8 Air outlet | 12 Power button |

Product model: C-A21M01S IC-A21M02B IC-A20M01S IC-A20M02B 1C A22M01S IC-A22M02B
 Rated power: 2100W Rated frequency: 50HZ Rated voltage: 220V
 Gross weight: 3.5kg Size: 416mm x306mmx45mm

Instructions




Please turn on the power supply before using the product, and make sure that the head contact is reliable. After 0, the product will show 9-A to indicate power-on is complete, and enter the reporting time.

- | | | |
|--|---|--|
| 1 Power button
After the socket is powered on, click on the power supply and the power is turned off. | 4 Temperature control cooking button
The product automatically controls the firepower, so that the temperature of the plus A is controlled within 2300. | 7 Time interface
Display the cooking time, the time displayed after the timer. |
| 2 On/Cancel button
The product is powered on, click on to cancel the long pass or exit the special job to obtain the status. | 5 Add and subtract buttons
The product automatically controls the firepower, so that the temperature of the plus A is controlled within 2300. | 8 Power interface
Display current heating power. |
| 3 Timer button
During the cooking process, click the timer button to perform scheduled cooking. | 6 Function button
In the special state, click select function, and start to enter the corresponding function mode. | 9 Temperature control logo
Start temperature control after selecting the temperature control cooking button. |

Soup function	Starting power 1400W	The default time is 2 hours. After the cooking is completed, it will automatically enter the heat preservation state for 2 hours.
Boiling water function	Starting power 2100W	The default time is 20 minutes.
Stir fry function	Starting power 2100W	The default time is 1 hour. The temperature is protected according to the oil temperature during the process.

Directly select the "+/-" button to cook, and long press "+/-" to achieve one-key maximum/one-key minimum firepower

Product manual

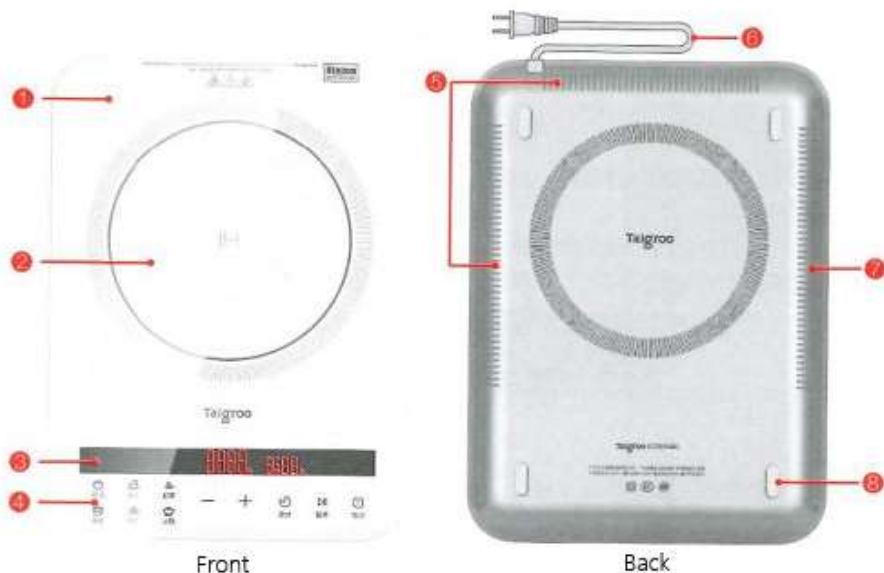

1 Stove panel

2 Pot storage area

3 Display area

4 Touch operation area

5 Air outlet


6 Power cable

7 Inlet

8 Supporting feet

Product model: 0-A2102 / 2103/2104/2107/2108 / A21SWFO5 TG-S2101 / 2102
 Rated power: 2100W Rated frequency 50HZ Rated voltage 220V-Gross weight: 3.3kg
 Size: 410mmx300mm x 39mm

Instructions

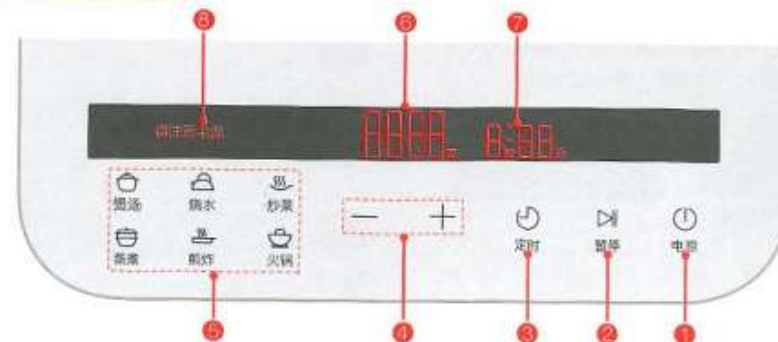

1 Power button

After power on, click the power button to start

2 Pause button

Press the pause button before work to pause work

3 Timer button

During the cooking process, click the timer button to perform timing cooking

4 Add and subtract buttons

You can also adjust the timing time by adjusting the firepower through the plus and minus buttons

5 Function button

Select the corresponding function for cooking

6 Power interface

Display the current heating power

7 Time interface

Display the cooking time, the time displayed after the timer

8 Warm reminder

After the product is turned off. When the temperature of the version is higher than 60 degrees, it will display "Please note that you need to click the on/number (power) button

Soup function	Starting power 1400W	The default time is 2 hours. After cooking, it will automatically enter the state of holding for 2 hours.
Boiling water function	Starting power 2100W	The default time is 20 minutes.
Stir-fry function	Starting power 1800W	The default time is 1 hour.
Steaming function	Starting power 1600W	The default time is 1 hour according to the oil temperature during the process.
Frying function	Starting power 1400W	The default time is 1 hour.
Hot pot function	Starting power 2100W	The default time is 2 hours. The temperature protection is performed when the water temperature continues to be higher than 120 degrees.

Directly select the "+/-" button to cook, and long press "+/-" to achieve one-key maximum/one-key minimum firepower

Safety instructions

- This product is designed for home use only.
- Before using this product, please carefully read all the instructions and warnings in this manual and on the product, and keep this manual in a safe place.
- Failure to follow the instructions and warnings may lead to accidents.
- This product does not take into account the following situations: the use of the product by unattended children and the disabled, the situation where children play with the product

Prohibit Do not allow children to operate alone to avoid dangers such as burns.

Prohibit Sealed containers or sealed foods cannot be placed on the induction cooker, such as high-pressure products, canned foods, coffee pots, etc., to avoid the risk of frying due to thermal energy.

Prohibit Do not dry the pan in an empty pot, so as not to affect the performance of the product or even cause danger. Do not leave for a long time during use. If you need to leave, please keep sufficient water in the pot.

Prohibit Do not flush the induction cooker directly. Be careful not to put water into the induction cooker! In order to avoid dangerous inspections.



Prohibit Do not insert foreign objects such as iron wires or block non-air ports and air intake ports to avoid danger.

Exhaust vent
Air inlet



Prohibit Do not use paper, aluminum foil, or other irrelevant items to heat the stove panel indirectly to avoid accidents.

Paper, aluminum foil, cloth, etc.



Prohibit Do not put the iron sheet on the stove panel to heat, so as to avoid danger due to high temperature.

Prohibit The induction cooker is not allowed to be used on any metal (iron, stainless steel, aluminum, etc.) platform.

Iron, stainless steel, aluminum and other metals



Mandatory Those who use a pacemaker, please study with a professional doctor and confirm that there is no effect before using this product.



Mandatory If it is damaged by the original line, it must be replaced by the manufacturer, maintenance or similar department in order to avoid danger.

Mandatory If the appliance is damaged, or even catch fire, disconnect the power cord from the socket after the appliance is used to avoid damage to the electronic components caused by long-time power on. It cannot be operated in the mode of an external timer or an independent remote control



Mandatory Do not forcefully impact the stove panel to avoid damage to the stove panel. If it is damaged, please stop using it and send it to a maintenance outlet for replacement.

Mandatory When in use, the induction cooker should be placed horizontally, with a distance of more than 10cm from the side and back to the wall. Do not use the induction cooker in a narrow space, and do not block the air inlet and outlet by foreign objects to affect heat dissipation.



Warning The cooktop of the induction cooker has a limited load-bearing capacity. Do not put anything over 8kg on the cover, otherwise the plastic cover and cooktop may be damaged.






Warning

Do not place the induction cooker in an environment with open flames or high temperature and humidity near gas stoves, kerosene stoves, gas stoves, etc.



Warning

Do not touch the stove panel with sharp instruments to avoid cracking and damage to the stove panel. If the cooktop is cracked, please turn off the appliance to avoid possible electric shock.

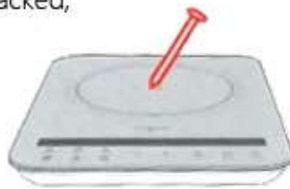

Attention

Avoid using the induction cooker on carpet, tablecloth, or thin paper, so as not to block the air inlet or exhaust port, which will affect the heat dissipation of the oven cavity.



Attention

Please use high-power and high-quality sockets > 10A alone, and do not use low-quality broadcast sockets.

Do not share a socket with high-power appliances such as air conditioners and electric stoves.

So as to avoid excessive current and cause fire.



Attention

Metal objects such as knives, forks, spoons and lids should not be placed on the surface of the cooking area as they may become hot.



Attention

During and after the use of the induction cooker, please keep it clean to prevent insects, dust and moisture from the cooker body, to prevent cockroaches from entering the induction cooker and causing short circuit of the circuit board: it is recommended to put it in a plastic bag after cleaning when it is not in use for a long time.



Beware of
burns

When the appliance is working or after the pot is removed for a period of time, there will be residual heat in the cooking area and the metal ring. Please do not touch it, and be careful of high temperature burns.

- To ensure that the product always works in good condition, after shutting down. The heat dissipation system in the product will continue to work for about 1 minute.
- We recommend that you turn off the power of the product after the heat dissipation system of the product stops working. After the product is used for a long time, the air inlet and outlet are easy to collect some dust or other dirt; please clean it with a soft brush or a small vacuum cleaner, and the oil on the stove panel can be cleaned with a neutral surface.
- Do not use more corrosive chemical agents for cleaning.
- When cleaning, pay attention to the protection of the stove panel to prevent the panel from being scratched.
- Under no circumstances should this product be rinsed directly with water.
- Please use and maintain your product in accordance with the requirements of this manual.