



1. Product Features

Four major functions of only one key, which is convenient and fast operation;


Double-layer shell, safe and anti-scalding;

15-hour appointment, worry-free and convenient;


One pot of three liners, making different soup products at the same time;

Artificial noise reduction design, which is low working noise.

Product Structure

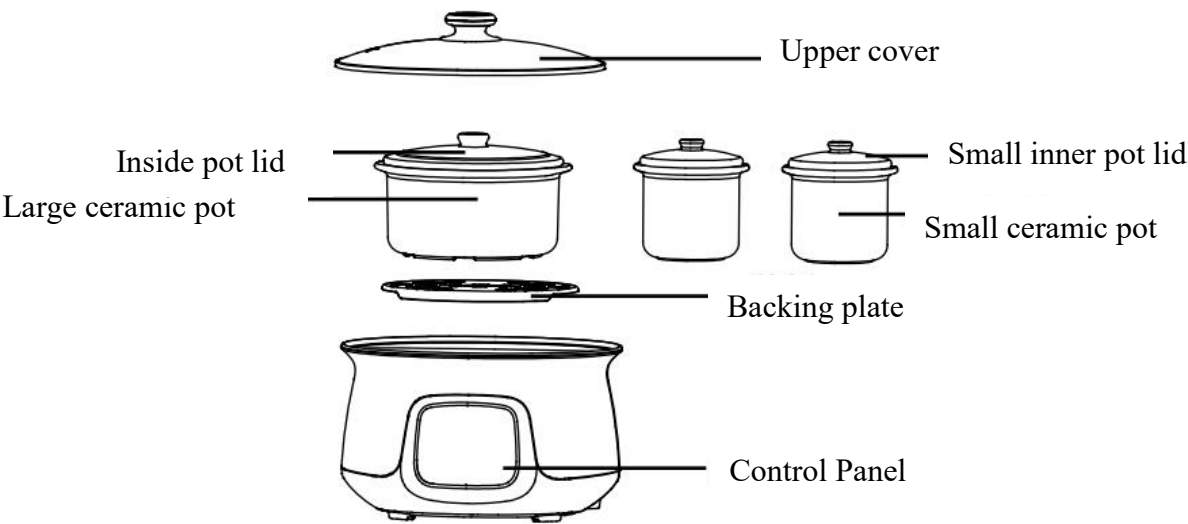

Control Panel

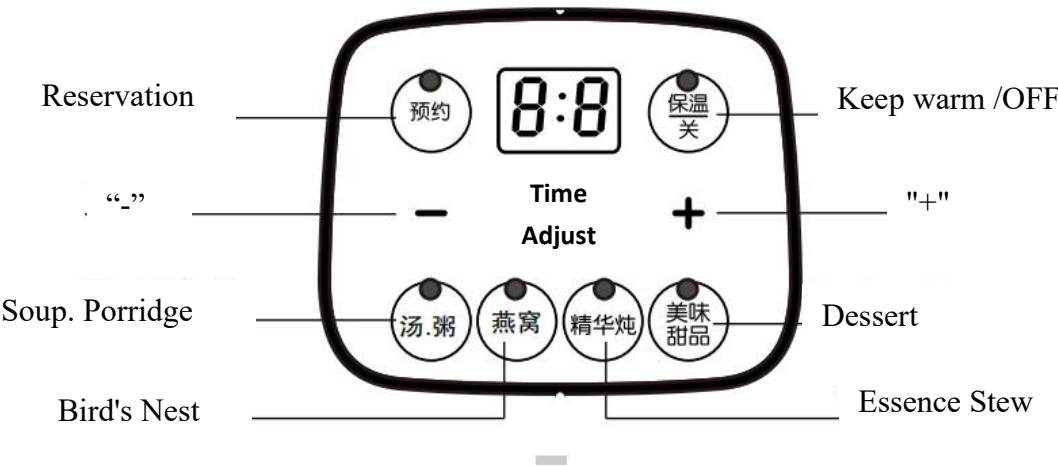

Usage Method

1. Add ingredients into the ceramic inner pot and add a proper amount of water (it is advisable that the water just submerges the food or slightly more), and then cover the inner pot.
2. Add a proper amount of water into the stewing cup container, put it into the backing plate, then put it into the large inner pot or the small inner pot as required, and cover the upper cover.

Note: The water addition does not exceed the maximum water level.

The above-mentioned maximum water level line is the water level line without placing the backing plate and the inner pan.

3. Turn on the power supply. After the power is turned on, the electric stewing cup will give out a "BI" sound. All indicator lights and the digital screen will turn off after being on for about 1 second. At this time, the electric stewing cup will enter the standby state and the digital screen will display "-". At this time, the corresponding function selection can be made.

4. Function Selection:

Select functions according to actual needs; According to the functions listed in the panel, press the corresponding function keys directly, such as stew, press the "soup. Porridge" key.

Function Key Operation Instructions

1. In the standby state of the "Soup Porridge", "Bird's Nest", "Essence Stew" and "Delicious Dessert" keys, press the "Soup Porridge", "Bird's Nest", "Essence Stew" and "Delicious Dessert" keys according to actual needs, and the corresponding function indicator lights are on and flashing, and the digital screen displays the default timing cooking time and flashing of the corresponding functions;

If it is not necessary to set the cooking time by itself, the system will automatically enter the cooking state of the selected function after about 5 seconds.

If you want to cancel the selected function, you must do it within 5 seconds, otherwise you need to cancel the original setting by pressing the "Heat Preservation/Off" key before selecting other functions.

See the following table for the default cooking time, adjustable cooking time and appointment time of each function:

Cooking time and reservation time range for each function			
Cooking function	Default cooking time	Adjustable cooking time	Maximum Reservation Time
Soup. Porridge	3 hours	1 hr 30 mins-4 hr 30 mins	15 hours
Bird's Nest	50 minutes	50 minutes-4 hours	
Essence stew	3 hours and 30 minutes	1 hr 30 mins-4 hr 30 mins	
Delicious dessert	4 hours	2 hours-6 hours	

The digital screen shows the time description: "0.5" means 50 minutes, "4.3" means 4 hours and 30 minutes, and "1.5" means 1 hour and 50 minutes.

2. " Heat Preservation /Off" key

In the standby state, press the "heat preservation/off" key to directly enter the heat preservation state. The digital screen displays "B" and the heat preservation lamp is on.

During cooking, if you want to switch functions, you need to press the "heat preservation/off" key to cancel the original setting and return to the standby state. At this time, you can re-select the required functions.

After cooking, it will automatically enter the heat preservation state and the heat preservation lamp will be on.

3. "Reservation" key

After selecting the required function in the standby state, press the "Reservation" key, and the digital tube will display the default reservation time "10", which will be adjusted to the required reservation time through the "+" and "-" keys.

You can also press the reservation key to set the reservation time before selecting the corresponding function. The specific operation method is as follows:

Press the "Reservation" key in standby state, and the digital tube will display the default reservation time "10", which will be adjusted to the reservation time you need through the "+" and "-" keys.

After the reservation time is set, select the function you need, such as "Bird's Nest". At this time, the digital tube displays the default cooking time of "Bird's Nest" function. If there is no need to set the cooking time by itself, no other key operations are required, and the system will enter the reservation state of "Bird's Nest" function after about 5 seconds.

When the appointment time countdown to the regular cooking time of the corresponding function, the system will automatically enter the working state of the function;


If the reservation time is less than or equal to the timing cooking time of the corresponding function, there is no reservation process and the cooking work state is directly entered;

The appointment time includes the cooking time, i.e. The appointment time arrives and the cooking is over. (Appointment for 6 hours means that cooking is over after 6 hours)

The maximum reservation time can be set at 15 hours.

The following figure takes the "soup. Porridge" function is scheduled for 4 hours and reserved for 8 hours as an example:

Method 1:

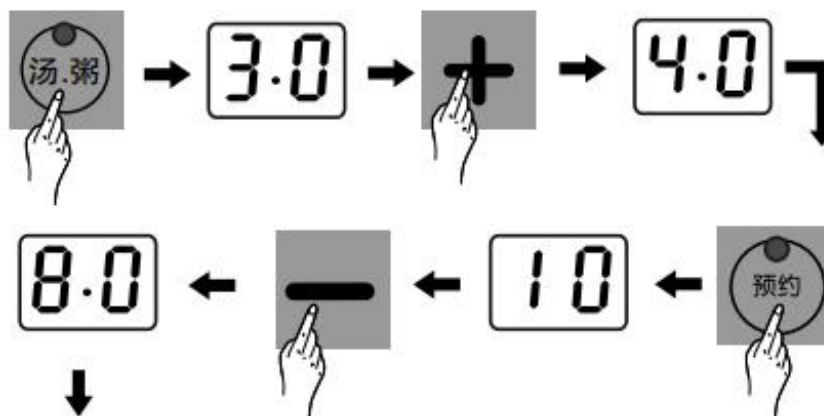


There is no other key operation for 5 seconds, and it will automatically enter the "Soup. Porridge" function reservation state;

When the countdown to the appointment reaches the cooking time, it will automatically enter the working state of the "soup and porridge" function.

After cooking, it will automatically enter the heat preservation state, the digital screen will display "B" and the heat preservation lamp will be on.

Method 2:

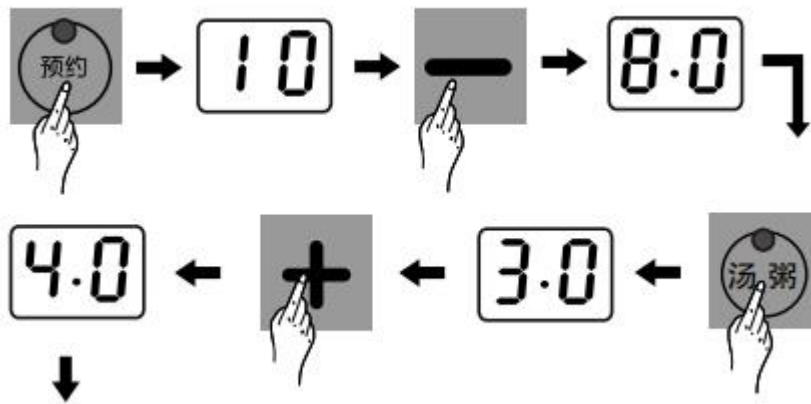

There is no other key operation for 5 seconds, and it will automatically enter the "Soup. Porridge" function reservation state;

When the countdown to the appointment reaches the cooking time, it will automatically enter the working state of the "soup and porridge" function.

After cooking, it will automatically enter the heat preservation state, the digital screen will display "B" and the heat preservation indicator will be on.

3. "+", "-" key

It is used to adjust the timing time. Each time the "+" key is pressed, it will increase by 10 minutes, and each time the "-" key is pressed, it will decrease by 10 minutes. Long press will realize rapid increase or decrease.

Under the condition of setting the reservation time, when the time setting reaches 10 hours, it will increase or decrease in units of 1 hour; When the time setting is less than 10 hours, it will increase or decrease in units of 30 minutes.

When the reservation time reaches the maximum value, continuing to press the "+" key is invalid; You need to press the "-" key to reach the corresponding timing time.

NOTE:

Do not add more water than the maximum water level;

Do not open the upper cover during the stewing process of the stewing cup, so as not to burn the boiling water in the stewing cup container.

If you adjust the set stewing time for too long (more than 5 hours), the water in the stewing cup container may be boiled dry, so appropriate water replenishment is required.

Bean ingredients are recommended to be soaked for 6 hours first.

In summer or when the temperature is relatively high, it is recommended to reduce the appointment time appropriately so as not to cause food deterioration.

Precautions

When using this product, you should pay special attention to the following:

1. Please use the AC power supply with the same voltage value as the nameplate.
2. Please use a power supply with qualified protective grounding to ensure personal safety.
3. Do not use it near or on the surface of inflammable and explosive articles; Do not use it in damp or close to other heat sources to avoid failure and danger.
4. This product shall not be used by people (including children) with physical, sensory or mental defects or lack of experience and knowledge of use, unless there is supervision or guidance on their use by people responsible for their safety.
5. Steam will be emitted when the product works. Do not put your face or hands close to the steam port to avoid scalding. Objects that are afraid of steam should not be placed above this product. Do not cover the steam port with dishcloth or similar items to avoid accidents or product failures.
6. When the product works, the temperature of the upper cover and stewing cup container is relatively high. Please do not touch it to avoid scalding.
7. Do not directly place the inner pot on open flame for heating, and avoid ceramic parts contacting cold water when it is hot, so as not to burst.
8. If the product is dry and burnt due to lack of water, please unplug the power supply immediately and wait for cooling before operating. Do not touch it with your hands at this time to avoid scalding.

9. When plugging in the power cord, it must be plugged to the bottom to ensure good contact.

10. The power plug and socket shall be kept dry. It is forbidden to plug and unplug the power plug with wet hands to prevent electric shock.

11. Do not move the product when it is powered on.

12. Do not disassemble the stewing cup without authorization after it breaks down. Please contact the company's after-sales service department. Maintenance personnel will check and repair it for you to ensure safety.

13. If the power cord is damaged, it must be replaced with a special cord or a special assembly purchased from its manufacturer or maintenance department.

14. Ceramic parts are fragile, so be careful not to collide with hard objects or fall from a height to cause breakage and damage.

15. Please do not place the products on carpets, tablecloths (made of ethylene plastic) and other non-high temperature resistant articles to avoid fire.

Note: It is strictly prohibited to dip the appliance into any liquid.

It is strictly prohibited to put food directly into the stewing cup container for cooking to avoid direct contact between food and the stewing cup container.

Cleaning and maintenance

1. The power cord should be unplugged before cleaning the product, and the product should be cleaned after cooling.
2. Ceramic parts, the upper cover can be cleaned with detergent and sponge (please do not use hard steel wire to clean, so as not to damage the surface), and then dry with cloth or let it dry naturally; Please. Do not immediately put the newly stewed ceramic inner pot into water to clean, so as not to cause rupture.
3. Wipe the outer surface of the stew cup container with wet towel, and do not use corrosive liquid for cleaning.
4. Do not immerse the power cord and the whole product in water or flush it, so as not to cause water inflow and failure of electrical appliances, thus affecting safe use.
5. When the product is not used for a long time, please clean it, put it into a packaging box and place it in a ventilated and dry place.

Common Faults and Troubleshooting

Serial Number	Fault phenomenon	Cause of failure	Exclusion Method
1	Shortly after the power on heating, the product suddenly turned off and did not work	There is no water in the stew cup container, resulting in dry burning and power failure protection.	Add a proper amount of water to the container of the stew cup.
		The backing plate is not placed, resulting in dry burning protection of the heating plate.	After the power is cut off, put in the backing plate as required and restart
2	No power on	The power cord is not plugged in properly.	Check whether the power cord plug is plugged into place
		Boil the water in the container to dryness, Power-off protection resulting from dry burning	Please add water to the container of the stew cup to cool it before electrifying it.
		Product failure	Please send it to the designated repair point for repair.
3	The product can be electrified but not heated	Product failure	Please send it to the designated repair point for repair.