

**型号: QY1688**

**Model: QY1688**

## **电动童车**

### **Electric stroller**

#### **安装和使用说明书**

#### **Installation and Operation Manual**

适用年龄: 37个月-95个月

Applicable age: 37-95 months

执行标准: GB6675.1-2014、GB6675.2-2014、GB6675.3-2014、GB6675.4-2014、GB19865-2005

Implementation standards: GB6675.1-2014, GB6675.2-2014, GB6675.3-2014, GB6675.4-2014, GB19865-2005

遥控器只允许监护人使用, 儿童不可触及

The remote control is only allowed for guardians and cannot be touched by children.

- 遥控控制前进、后退和左、右转向  
Remote control of forward, backward and left and right steering
- 方向盘具有音乐功能、播放器功能, 配备安全带  
The steering wheel has music function, player function and safety belt.
- 摇摆功能(若需要)  
Swing function (if required)



**浙江省平湖市勤益塑料模具厂 内有重要信息请妥善保管**  
**Qinyi Plastic Mould Factory, Pinghu City, Zhejiang Province**  
Please keep the important information in it properly.

感谢您使用 QY1688 电动童车

Thank you for using QY1688 electric stroller

使用本产品前请先阅读说明书, 它将告诉你正确的操作方法和安装步骤。以避免不正确的操作方法二损坏本产品或伤及您的宝宝。本说明书应妥善保管并置于易取之处。

Please read the manual before using, which will tell you the correct operation method and installation steps. In order to avoid incorrect operation method 2 damaging this product or hurting your baby. This manual shall be properly kept and kept in an easily accessible place.

## 规格说明

### Specifications

蓄电池 Battery	6V 4A
电机 Motor	摇摆电机 390# Swing motor 390 # 驱动电机 380# Drive motor 380 #
使用年龄 Age of use	37 个月-95 个月 37-95 months
最大负重 Maximum load	25kg
速度 Speed	1-3km/h
使用时间 Usage Time	充电 10-12 小时, 可使用 1-2 小时 Charge for 10-12 hours and use for 1-2 hours.

## 充电注意事项

### Charging Precautions

1. 在第一次使用电动车时, 必须保证电池充满 16 个小时; 否则将永久性损坏电池并无法维修。每次充电时间不得超过 18 小时。

When using an electric vehicle for the first time, the battery must be fully charged for 16 hours. Otherwise, the battery will be permanently damaged and cannot be repaired. Each charging time shall not exceed 18 hours.

2. 充电时先将充电器 DC 插头插入充电孔, 再将充电器插在电源插座上。

When charging, insert the charger DC plug into the charging hole first, and then plug the charger into the power socket.

3. 每次连续使用 1 小时, 就必须及时充电, 正常充电时间为 10-12 小时。

Each time it is used continuously for 1 hour, it must be charged in time, and the normal charging time is 10-12 hours.

4. 充电过程中充电器或蓄电池有发热现象(60°C以下)均属于正常。

During charging, it is normal for the charger or storage battery to generate heat (below 60°C).

5. 当电动车长时间不用时, 每个月必须至少充电一次。

When the electric vehicle is not used for a long time, it must be charged at least once a month.

## 遥控器电池使用说明

### Instructions for Remote Controller Battery

1. 电池安装时先把电池盖打开, 然后按照极性将电池装入, 锁好电池盖。同理取出电池。

When installing the battery, first open the battery cover, then load the battery according to the polarity and lock the battery cover. Similarly, take out the battery.

2. 遥控器使用2节1.5V AAA 电池。

The remote control uses 2 1.5V AAA batteries.

3. 非充电电池不能充电。

Non-rechargeable batteries cannot be charged.

4. 充电电池在充电前应从玩具中取出。

The rechargeable battery should be taken out of the toy before charging.

5. 充电电池只能在成人监护下充电。

Rechargeable batteries can only be charged under adult supervision.

6. 不同类型的电池或新旧电池不能混用。

Different types of batteries or new and old batteries cannot be mixed.

7. 电池应以正确的极性放入。

The battery should be placed with the correct polarity.

8. 用尽的电池应从玩具中取出。

Exhausted batteries should be removed from toys.

9. 电源端子不得短路。

The power supply terminal shall not be short-circuited.

10. 遥控器只能由成人使用，儿童不可触及。

The remote control can only be used by adults and cannot be touched by children.

## **维护和保养**

### **Maintenance**

1. 经常保持单车的清洁，平时只需用软布或纸擦拭即可，不能用水冲洗，不能用化学试剂擦洗。

Always keep the stroller clean. Usually, you only need to wipe it with soft cloth or paper. You cannot wash it with water or chemical reagents.

2. 蓄电池电量不能用尽，充电不能超时，长期不用应充满电，再断开电源。

The battery cannot be used up, the charging cannot be overtime, the battery should be fully charged for a long time, and then the power supply should be disconnected.

3. 内含电池充电器应定期检查。其电线、插头、外壳和其他部件是否损坏，发现破损时应停止使用，直至修复完好。


Chargers with batteries should be checked regularly. Whether the wires, plugs, shells and other parts are damaged or not, stop using them when found damaged until they are repaired in good condition.

## 安装说明

### Installation Instructions

如图 1

As shown in Figure 1

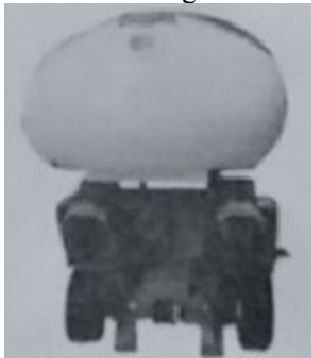


1. 将车头对准车身上两根方铁管插入车头孔, 即可。(如图 1)

1. Align the front of the stroller with the two square iron pipes on the stroller body and insert them into the front hole. (Figure 1)

如图 2

As shown in Figure 2

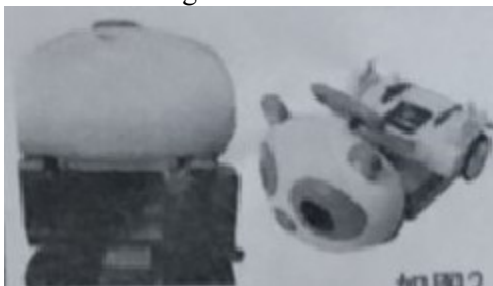

2. 将两个(5\*15)的螺钉紧固再车头和车身上的两组线插接好。(如图 2)

2. Fasten the two (5\*15) screws and plug in the two sets of wires on the front and body. (Figure 2)

如图 3

Figure 3




3. 将红色电线端子插在红色电瓶庄头上去。(如图 3)

3. Plug the red wire terminal into the head of the red battery. (Figure 3)

## 安装说明

### Installation Instructions

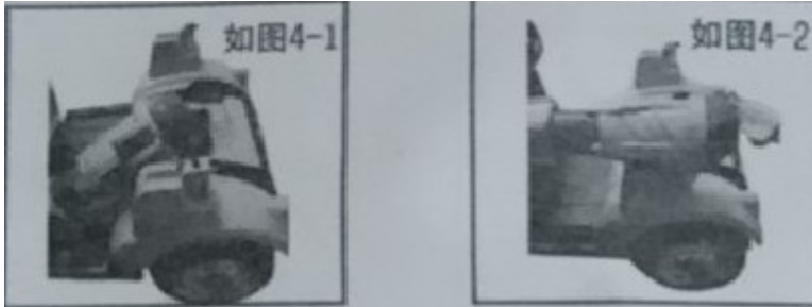

如图 4-1


如图 4-2

As shown in Figure 4-1

Figure 4-2

4. 将扶手上的端子和车身上的端子连接上, 扶手和车身对上, 再用(5\*55)的螺丝穿入对面螺母紧固。(如图 4)

4. Connect the terminals on the armrest with the terminals on the vehicle body, pair the armrest with the vehicle body, and then use (5\*55) screws to penetrate into the opposite nut for fastening. (Figure 4)

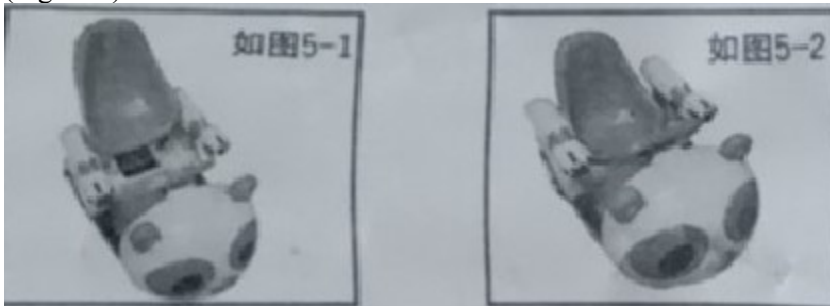

如图 5-1


如图 5-2

As shown in Figure 5-1

Figure 5-2

5. 安装座位, 先将座位放入车身上, (大小有两档)再用四颗长螺钉紧固。(如图 5)

5. Install the seat. First put the seat on the vehicle body (with two gears in size) and then tighten it with four long screws. (Figure 5)

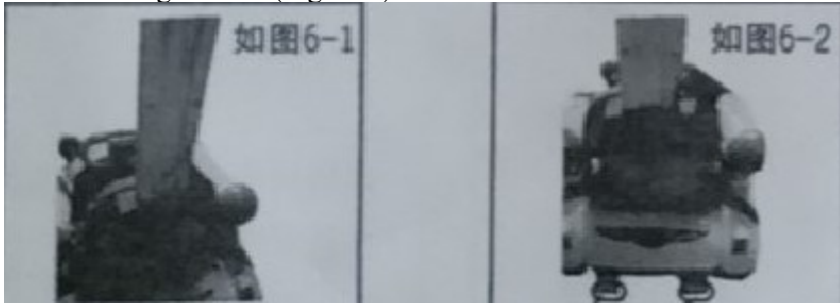

如图 6-1

如图 6-2

As shown in Figure 6-1

Figure 6-2

6. 推把安装, 将推把对入座位上方孔, 如图按住穿入就可。(如图 6)


7. Install the push handle, put the push handle into the square hole above the seat, and press and hold it as shown in the figure to penetrate it. (Figure 6)

此二脚用 4 个螺钉紧固好 注意: 在使用时一定装上此脚

Tighten these two feet with 4 screws Note: Be sure to install this foot when in use.

## 功能指示图

### Function Indicator Diagram

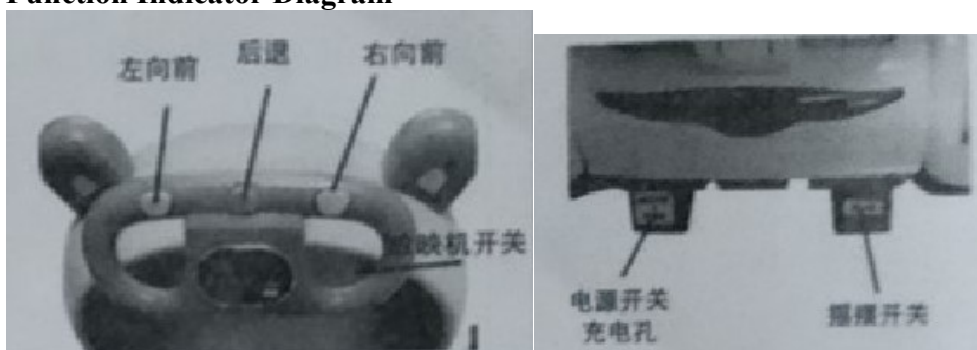

左向前 Left Forward
后退 Retreat
右向前 Right Forward
放映机开关 Projector switch
电源开关 充电孔 Power switch charging hole
摇摆开关 Swing switch

#### 1. 手动

##### 1 Manual

骑行者坐好，打开电源开关，音乐声响起，若音乐播放过程中骤停，请关闭电源后再重新启动即可。

The rider should sit down, turn on the power switch, and the music will sound. If the music stops suddenly during playing, please turn off the power and restart it.

按住向前开关，车子前进，松开向前开关，车停。按住后退开关，车子后退运行，松开后退开关，车子不能运行。

Press and hold the forward switch, the stroller moves forward, release the forward switch, and the stroller stops. Press and hold the back switch, the stroller will run back, release the back switch, the stroller will not run.

#### 2. 遥控(看遥控说明书)

##### 2. Remote control (see remote control instructions)

骑行者坐好，打开电源开关，音乐声响起，若音乐播放过程中骤停，请关闭电源后再重新启动即可。前进/后退按钮向前，车子自动向前行驶，前进/后退按钮向后，车子自动后退运行。左右转向向左，车子左转。左右转向向右，车子右转。注：(遥控器使用说明：1. 遥控器装好电池，2. 摇摆开关置于运行位置。

The rider should sit down, turn on the power switch, and the music will sound. If the music stops suddenly during playing, please turn off the power and restart it. The forward/backward button moves forward, and the stroller moves forward automatically. The forward/backward button moves backward, and the stroller moves backward automatically. Turn left and right, turn

left, turn left. Turn left and right, turn right, turn right. Note: (Instructions for using the remote controller: 1. Install the battery on the remote controller, and 2. Place the swing switch in the running position.

3.在非骑行状态, 请将电源开关置“关”

3. In the non-riding state, please set the power switch "OFF"

4.遥控器电池的使用

4. Use of remote control battery

打开遥控器上的电池盖, 将两节 AAA 1.5V 电池装入, 盖上电池盖并用螺钉固定。

Open the battery cover on the remote control, insert two AAA 1.5V batteries, close the battery cover and fix it with screws.

5.保险丝

5. Fuses

本产品配备保险丝, 若车子发生堵转等异常时, 保险丝会断开以保护马达不会烧坏。若车子发生堵转等异常时, 保险丝会断开、保险烧坏要换同型号保险丝。

This product is equipped with a fuse. If the stroller is blocked, the fuse will be disconnected to protect the motor from burning out. If the stroller is blocked, the fuse will be disconnected, and the fuse will be burned out. Replace with the same type of fuse.

6.若有摇摆功能, 摇摆开关开, 则车子原地摇摆。

6. If there is a swing function and the swing switch is turned on, the stroller will swing in place.

## 使用说明

### Instructions

故障类型 Fault	检测部位 Detection Part	排除方法 Exclusion Method
电机不转 The motor does not rotate	<p>1. 前后开关接触良好否? Is the front and rear switches in good contact?</p> <p>2. 电机端子上焊接是否良好? Is the welding on the motor terminals good?</p> <p>3. 电机引线的接插件是否接插一项好? Is the connector of the motor lead connected properly?</p> <p>4. 将电机的接插件脱开, 直接接在电池转动否? Disconnect the connector of the motor and connect it directly to the battery. Do you want to rotate?</p>	<p>否.将前后开关修好, 是, 下一项。 No. Fix the front and rear switches, yes, the next item.</p> <p>否, 将端子上线焊接好。是下一项。 No, solder the terminals on the wire. Is the next item.</p> <p>否, 将接插件插好。是, 下一项。不转, 换电机, 转动, 驱动电路板故障, 送专业维修点修理。 No, plug in the connector. Yes, next item. Do not rotate, change the motor, rotate, drive circuit board failure, send to a professional repair point for repair.</p>
只前进不后退或只后退不前进 Only forward but not backward or only backward but not forward.	<p>1. 检测前后关, 用三用表测接触良好否? Before and after the test, use a three-meter to test whether the contact is good?</p> <p>2. 驱动线路至倒前后关接线是否良好? Is the wiring of the drive line to the front and back of the switch in good condition?</p>	<p>否, 换前后开关是, 下一项。 No, change the front and rear switches Yes, next item.</p> <p>否, 将线接好, 是, 驱动电路板故障, 送专业维修点修理。 No, connect the wire properly. Yes, the drive circuit board is faulty and sent to a professional repair point for repair.</p>
速度很慢 Very slow	<p>1. 检查电池电压是否在标称电压以上? Check whether the battery voltage is above the nominal voltage?</p> <p>2. 将电机(带齿轮箱)直接接在电池上, 速度加快否? Is it faster to connect the motor (with gearbox) directly to the battery?</p> <p>3. 将齿轮箱卸下, 检查齿轮转动良好否? Remove the gear box and check whether the gear rotates well.</p>	<p>否, 充电, 是, 下一项。 No, charging, yes, next item.</p> <p>否, 下一项。是, 驱动电路板故障, 送专业维修点修理。 No, next. Yes, the drive circuit board fails and is sent to a professional repair point for repair.</p> <p>否, 换齿轮箱, 是, 换电机。 No, change the gearbox, yes, change the motor.</p>
充不进电 Can't charge	<p>1. 充电器输出端子有无标称电压? Is there a nominal voltage at the charger output terminal?</p>	<p>没有, 换充电器, 有, 下一项。 No, change the charger, yes, next item.</p> <p>有, 换电池。没有, 下一项。</p>



<p>electricity</p>	<p>2. 电将充电器输入输出插接好, 将电池端两插簧拔出, 测有标称电压否? Electrically plug in the input and output of the charger, pull out the two plug-in springs at the battery end, and measure the nominal voltage?</p> <p>3. 检查充电座紧固件是否松动。焊点是否脱落? Check the charging seat fasteners for looseness. Does the solder joint fall off?</p>	<p>Yes, change the battery. No, next one. 是, 将充电座接好。 Yes, connect the charging seat.</p>
<p>车子能动 声光全无 The stroller can move without sound or light.</p>	<p>1. 声光开关是否良好? Is the acousto-optic switch good?</p> <p>2. 检查从电池到车头的引线和接插件是否良好? Check whether the leads and connectors from the battery to the front are in good condition.</p>	<p>否换开关, 是, 下一项。 No switch, yes, next item. 否, 将接插件接插好, 将断绳接好。 No, plug in the connector and connect the broken rope.</p>
<p>电机转而车不动 The motor turns and the stroller does not move.</p>	<p>1. 右后轮轮子转动否? Does the right rear wheel turn?</p> <p>2. 检查电机松动否? Check whether the motor is loose?</p> <p>3. 检查齿轮箱, 各级齿轮箱损坏否? Check the gearbox. Is the gearbox at all levels damaged?</p>	<p>转动, 是轮子着地, 否, 下一项。 Yes, the wheel touches the ground, no, next item. 是, 将齿轮箱卸下, 将紧固电机的螺钉上紧, 否, 下一项。 Yes, remove the gear box and tighten the screws fastening the motor. No, next. 是, 换齿轮箱。 Yes, change the gearbox.</p>
<p>车子一会走, 一会停 The stroller will leave and stop later.</p>	<p>1. 骑车者是否超过 25 公斤体重? Does the rider weigh more than 25kg?</p> <p>2. 是否在崎岖不平的地面骑行? Do you ride on rugged ground?</p> <p>3. 用手转动车轮, 三个从动轮是否灵活? Turn the wheels by hand. Are the three driven wheels flexible?</p>	<p>是, 正常, 否, 下一项。 Yes, normal, no, next item. 是, 正常应在水泥路面骑行。 Yes, it is normal to ride on concrete roads. 否, 下一项。 No, next. 否, 排除轮车及轮轴故障; No, eliminate the wheel vehicle and axle faults; 是, 及时充电。 Yes, charge it in time.</p>

## 使用注意事项

### Use Considerations

1. 不得在街道, 马路, 斜坡等危险地带使用。

It shall not be used in dangerous areas such as streets, roads and slopes.

2. 请在平整良好的地面行驶, 请不要在光滑地面(如大理石, 地砖)等表面使用。

Please drive on smooth ground, please do not use on smooth ground (such as marble, floor tiles) and other surfaces.

3. 本产品限乘一人, 不可超载, 最大负重 25KG。

This product is limited to one person and cannot be overloaded. The maximum weight is 25KG.

4. 儿童必须在成人指导下骑行, 且骑行中看护人不得离开。

Children must ride under the guidance of adults, and caregivers are not allowed to leave during riding.

5. 不得改动本车线路或附加带电装置。

Do not change the wiring of this vehicle or add live devices.

6. 不要在水中使用, 不要将水及其他液体倒在车上。

Do not use it in water and do not pour water and other liquids on the stroller.

7. 车子在行进中不宜将车堵住, 以免损坏器件, 如出现堵住现象, 请立即松开前后开关, 排除障碍物后再骑行。

It is not appropriate to block the stroller while it is traveling, so as not to damage the devices. In case of blocking, please release the front and rear switches immediately and remove obstacles before riding.

8. 车子骑行速度缓慢时应及时充电, 骑行时间过长会造成蓄电池寿命缩短。

When the stroller is riding slowly, it should be charged in time. If the riding time is too long, the battery life will be shortened.

9. 不适用时, 请关闭电源开关, 长期不用时, 请拔下电池接插件。

If it is not applicable, please turn off the power switch. If it is not used for a long time, please unplug the battery connector.

10. 雨天不宜行驶。

It is not suitable to drive in rainy days.

11. 本车主要使用 PP 材料, 无毒、无辐射、完全使用期限为三年。


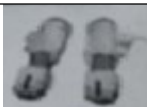
This stroller mainly uses PP material, which is non-toxic and radiation-free, and has a full service life of three years.

12. 车子在行进中不要打开扶手, 以免发生危险; 关闭扶手时请特别注意不要让儿童的手放在扶手附近, 以免夹伤手指!

Don't open the armrest while the stroller is moving to avoid danger. Please pay special attention not to let children's hands be placed near the armrest when closing the armrest, so as not to hurt their fingers!

## 装箱组件说明

### Boxing Component Description

1		车头 Head	2		车身 Body	3		座位 Seats
4		扶手 Armrest	5		推把 Push handle	螺钉(一袋) Screw (one bag) 遥控器 Remote control		

					充电器 Charger
--	--	--	--	--	----------------

## 产品应由成人组装!

Products should be assembled by adults!



警告

### Warning

**非交通工具，须在监护人的看护下使用。在使用前，对小孩进行安全教育!**

**It is not a means of transportation and must be used under the care of a guardian. Before use, carry out safety education for children!**

为了您的宝宝安全驾驶，必须注意如下警告：

In order for your baby to drive safely, you must pay attention to the following warnings:

1. 产品应由成人组装!

Products should be assembled by adults!

2. 儿童必须在成人指导下使用，且使用过程中看护人不得离开!

Children must be used under the guidance of adults, and caregivers must not leave during use!

3. 蓄电池充电必须有成人进行。使用本产品前请先充电!

Battery charging must be carried out by adults. Please charge before using this product!

4. 为避免对儿童造成伤害请将塑料袋等包装材料远离儿童!

In order to avoid harm to children, please keep plastic bags and other packaging materials away from children!

5. 请定期检查产品及所使用的充电器，查看电线、插头、外壳和其他部件是否损坏，发现损坏时应停止使用，直至修复完好。

Please check the product and the charger used regularly to see if the wires, plugs, housings and other components are damaged. If any damage is found, stop using it until it is repaired in good condition.

6. 蓄电池不可更换，非专业人员请勿私自更换蓄电池。

The battery cannot be replaced. Non-professionals are not allowed to replace the battery without permission.

7. 车辆上无连接方式的电线不能插到输出插座。

Wires without connection on the vehicle cannot be plugged into the output socket.

8. 充电时，必须远离易燃物品，防止火灾发生。

When charging, you must stay away from flammable items to prevent fire.

9. 请勿使用与本产品规格不符的保险丝。

Do not use fuses that do not conform to the specifications of this product.

10. 为了避免小零件伤害，3岁以下儿童禁止使用。

In order to avoid injuries to small parts, children under 3 years old are forbidden to use them.

11. 本说明书中采用的插图是为了说明产品的操作方法和产品疾厄宫。当实物与插图存在少量差异时，请以实物为准。

The illustrations used in this manual are to illustrate the operation method of the product and the disease of the product. When there is a small difference between the physical object and the illustration, please refer to the physical object.

12. 为了改良产品的品质, 在未予以告知的情况下, 我们可能更改产品的部分结构和外观, 请谅解。

In order to improve the quality of the product, we may change some of the structure and appearance of the product without informing us. Please understand.