




一 **Operation Instruction**
二 Joyoung soybean milk
三 maker
四 DJ12B-A11

Quick installation guide

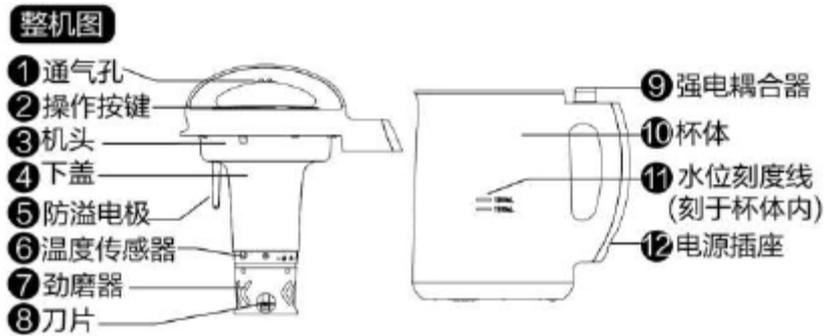

整机图



Complete machine drawing

- ① Vent hole
- ② Operating keys
- ③ Handpiece
- ④ Lower cover
- ⑤ Anti-overflow electrode
- ⑥ Temperature sensor
- ⑦ Stiffener
- ⑧ Blade
- ⑨ Strong electric coupler
- ⑩ Cup Body
- ⑪ Water level scale line (engraved in cup body)
- ⑫ Power supply socket

Warm reminder

- Please take out all objects in the cup.
- Please correctly assemble the paste receiving cup and its handle in the direction of the arrow in the figure to prevent the cup body from sliding down and causing scalding when drinking hot.

Quick Use Guide
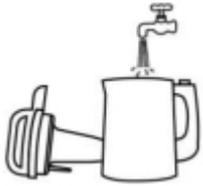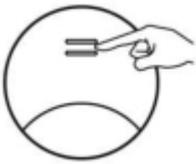
<p>① Wash Machine inner wall and cutter head</p> 	<p>② Add ingredients and water Add water between the upper and lower water level scale lines</p> 	<p>Close Close Handpiece</p> 
<p>④ Insert Tighten power supply slightly</p> 	<p>⑤ Press After selecting the corresponding function, enter the function automatically.</p> 	

Functions and recipes

Please select the corresponding function and recipe according to the product model. Please use the measuring cup equipped with this product to measure the ingredients. Please add water between the upper and lower water level scale lines (if the recipe has a definite amount of water, please follow the recipe requirements).

One cup of food quantity refers to one flat cup.

Warm reminder

- Please process large pieces of food into peanut grain size.
- Glutinous rice is sticky, black beans, black rice, walnut kernels, red dates, raisins and other ingredients are not easy to froth, please add them strictly according to the recipe, otherwise it will cause alarm.
- making time was measured at rated voltage, medium water level, 23°C water and < 500m altitude. Deviation in actual use is normal.

Function	Recipe	Food quantity
Soybean milk (about 30 minutes)	Dried soybean milk	1 cup of dried soybean
	Wet soybean milk	1 cup of dried soybean (soak in water)
Meal substitute Soybean milk (about 30 minutes)	Lady's meal	1/10 cup of Job's tears, 1 /10 cup of oatmeal, 1/10 cup of black sesame, 1/5 cup of yam, 1/10 cup of red bean, a little of poria cocos and red jujube
	Men's meal replacement	1/5 cup of oat kernel, 1/10 cup of black sesame, 3/10 cup of Chinese yam, 1/10 cup of black soybean, 2 pieces of walnut kernel (broken), euryale seed, pumpkin seed kernel and a little medlar
	Fixed-base meal replacement	1/5 cup of red bean, 1/5 cup of oat kernel, 1/10 cup of black sesame, 3/10 cup of Chinese yam, 2 pieces of walnut kernel (broken), 2 pieces of denucleated red dates (broken), pumpkin seed kernel and medlar Jamlom
Rice paste (about 25 minutes)	Pure rice paste	4/5 cup of dry rice
	Tonifying vital energy and Nourishing Blood Paste	3/5 cup of rice, 1/5 cup of lily, and 5 red dates with pit removed
	Black rice paste	1/2 cup of dry rice and 1/5 cup of black rice
Fruit and vegetable juice (about 5 minutes)	Smooth and delicious milkshake	3 cups of bananas, 2 cups of cucumbers, 3 cups of fresh milk, 3 cups of purified water and a proper amount of white sugar
	Kiwi fruit and banana juice	3 cups of kiwi fruit, 2 cups of banana cubes and 5 cups of purified water
	Mango juice	4 cups of mango, 5 cups of crushed ice and 6 cups of purified water

Use method

Parts and accessories

- Control panel diagram



Direct option

Direct option: select the button to activate this function

Pre-use instructions

- This product is only used in areas below 2000 meters above sea level in mainland China. If the altitude difference is more than 1500 meters after the change of the place of use, please plug in the power supply and press the "fruit and vegetable" key for 3 seconds. Prompt "Di, Di, Di" and the indicator light flashes three times to complete the operation. (Please note that if there is no above prompt, please repeat the operation after power failure).
- Please clean the machine before use.
- It is suggested that function of beans should be used for the first time.

Use method

- Add ingredients and water

Add the cleaned ingredients according to the recipe, and add water between the upper and lower water lines.

- switch on

Please ① place handpiece vertically into the cup body, ② plug in the power cord, ③ switch on the power supply, and when the power is on, the "Di" sound will be prompted and the lights will be on. (left)



Warm reminder

Please close handpiece and press tightly. If there are more ingredients, please spread them out. Please ensure that handpiece and strong electric coupler are installed in place. (pictured above)

- Starting function

Selecting: after touching and pressing the function, sound and light will prompt, other key lights will go out, and the function will be entered automatically.

- Canceling

Deselected function: Touch the function again, sound and light prompt, other key lights are on, and the selected function will be canceled.

- Production completed

The prompt "Di Di Di" (stop after about 15 seconds) flashes and the corresponding function lights.

- Standby

After the machine is powered on, all lights will be on. If there is no subsequent operation, the function lights will be slightly on.

Warm reminder

This machine has the function of automatic heat preservation (see "Functions and Recipes" for the heat preservation function), and the corresponding function indicator flashes during heat preservation.

Warm reminder

The temperature is higher than 30°C, and the reservation time should not exceed 8 hours.

Do not use soaked ingredients when making an appointment.

Please do not cut off the power during the reservation process, otherwise please change the ingredients and re-make.

There is a deviation between the prompt time for completion of production and the appointment time, which is a normal phenomenon. Please feel free to drink.

Maintenance and repair

- After cleaning, it is recommended to dry it or dry it before assembling it into a complete machine for storage.
- Please store the products in a dry and ventilated place.

Warm reminder

Do not put it into a disinfection cabinet or dryer for disinfection and drying.

If, after making, for example the inside of the cup body is locally discolored and blue on the stainless steel surface, which is a normal phenomenon and harmless to human body, please feel free to drink. (Phosphoric acid ions and calcium and magnesium plasma in food materials crystallize at a certain temperature to cause bluing, which can be wiped off with vinegar.)



Please dry or dry the cleaned machine head before placing it in the cup to avoid peculiar smell.

Cleaning and storage

After the machine is cooled, please clean it in time, dry it or dry it and store it in a dry and ventilated place.

Warm reminder

Do not clean the machine with steel balls. It is recommended to soak in hot water and detergent before cleaning.

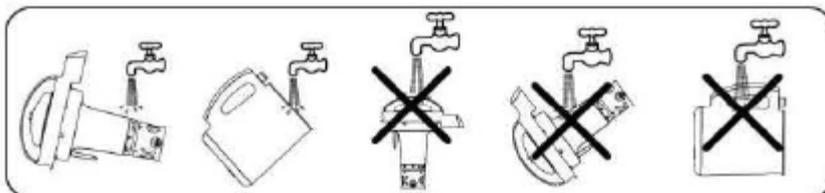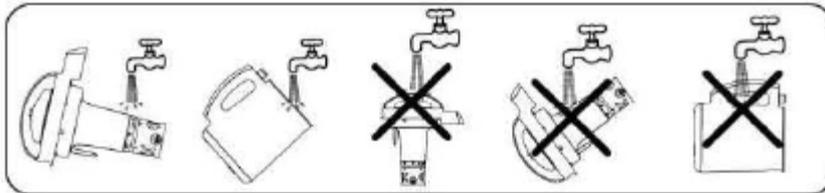

Safety precautions

Warning Caution should be exercised against risks that may lead to danger to personnel, serious injuries and heavy property losses.	pay attention to Attention should be paid to the risks that may cause injuries to personnel or damage to articles.
 It means "forbidden" and cannot be carried out.	 It means "mandatory" and must be implemented.

- In order to prevent electric shock, fire, scald and other accidents, please observe the following contents.

Warning



- Please clean the cup body, blade, overflow prevention electrode and temperature sensor in time. The blade edge is sharp. Take out, wipe and clean it carefully. Wear protective gloves.



- During the cooking of the product and before cooling after the work is completed, the temperature inside the cup body, the lower cover, the blade and other parts are relatively high. Do not touch to avoid scalding.



pay attention to

- Do not plug or unplug the power cord with wet hands to prevent electric shock.
- During the making process, do not lift the machine head or move the product quickly to avoid scalding by steam or accidents such as scalding and electric shock caused by food overflow.
- Do not lift the whole machine with the machine head to prevent the cup from slipping off.
- Do not use damaged power cord or plug to prevent electric shock or short circuit from causing injury accident or fire. If the power cord is damaged, you must purchase a special power cord from Joyoung after-sales service department for replacement.
- Do not add more than 70°C hot water for making, so as not to affect the taste or cause abnormalities such as poor crushing and soybean milk overflow.
- making is not completed, please do not drink. Drinking uncooked soybean milk will do harm to human body.
- Do not immerse the handpiece or cup in liquid, do not drench the handpiece with water, and do not allow water to enter the air vent, strong electric coupler, power socket and the bottom

of the cup. If water enters, please stop using it or dry it and dry it before using it to avoid short circuit or electric shock.

- Children should be taken care of to ensure that they cannot play or approach this product to avoid personal injury caused by scalding or misoperation.
- Accompanied by experienced guardians or coaches, this product can only be used by people with abnormal or no independent capacity.
- Before use, please confirm that the local power supply should be consistent with the power supply marked on this product, otherwise the product may be damaged or fire may occur.
- Please operate on a stable horizontal table and keep away from the edge of the table to prevent falling.
- Do not use this product under or near curtains and other combustible materials (such as under closets), otherwise it may cause fire.
- The handpiece is vertically buckled to the cup body, and the power cord is plugged into the power outlet. Please ensure that it is installed in place to prevent loosening, power failure or overheating and burning.
- When the product works, keep a certain distance from live objects such as socket, keep the plug within reach, and keep away from inflammable and explosive articles. At the same time, the grounding wire of power socket must be well grounded.
- After the product starts to work, in case of power failure or other abnormalities, please pay attention to replace the ingredients and make it again. Otherwise, it will cause troubles such as bottom pasting, soybean milk overflow, alarm and sauce reporting.
- After the production is completed, please cut off the power first and pour the soybean milk after taking off the machine head, so as to prevent the machine head from sliding down or spilling the drink, causing damage or scald to the product.
- The temperature of the newly-made soybean milk is relatively high. Please use high-temperature resistant containers and pay attention to safety to prevent scalding caused by spillage of the soybean milk.
- If filtering is required, please pay attention to the high temperature of the residue attached to the filter screen. When cleaning the filter screen, do not face people and pay attention to safety to prevent the residue from splashing and causing burns.

Use tips

- This product is only suitable for home use, not for commercial use.
- When it is used for the first time (including the first time after adaptation), the making time may be prolonged.
- Some food materials contain natural pigments, which may cause staining of the lower cover and spill-proof electrode. This is a normal phenomenon and does not affect the soybean milk. Please feel free to drink without damaging your health.
- In order to fully crush and release nutrition, it is normal for the machine to make intermittent, fast and slow sounds during beating.
- Do not make soybean milk continuously for a long time, otherwise the motor may start the automatic protection function, and the motor will temporarily not work until the motor is completely cooled before normal use.
- After making is completed, the next making should be carried out at intervals of more than 8 minutes, otherwise the service life of the product will be affected.

- Infants, people with renal failure and gastrointestinal dysfunction should choose low-concentration soybean milk or reduce drinking quantity as appropriate.

During heat preservation, it is normal for the motor to stir, so it can be prepared for drinking after power failure.

Failure Analysis and Troubleshooting

Fault	Reason statement	Countermeasures
The indicator light is not on.	Handpiece is not straight.	Reposition handpiece
	The power cord is not plugged in	Plug the power cord to the bottom.
The indicator light is on and the machine is not working.	No function selected	Select the appropriate function
	Not adding water or adding too little water	Add water between the upper and lower water level scale lines
	Temperature sensor failure	Send it to the local after-sales service department for repair.
The motor does not stop working.	Water entering the machine head	Send it to the local after-sales service department for repair.
Heating is not stopped.	No ingredients added	Add ingredients according to the requirements of the recipe in the manual.
	Internal water inflow	Send it to the local after-sales service department for repair.
	Under normal heating	Wait a few minutes
No response to key press	The system did not reset after power failure.	Turn off the power for 3 minutes before using it.
	Failure of the machine itself	Send it to the local after-sales service department for repair.
The ingredients will not break or spill over the pan.	Error selecting function	Select the correct function
	Too many or too few ingredients	Add ingredients according to the requirements of the recipe in the manual.
	Failure of the machine itself	Send it to the local after-sales service department for repair.
Paste pot	The inside of the cup body is not cleaned	Clean the inside of the cup body
	Too many ingredients are added	Add ingredients according to the requirements of the recipe in the manual.
Long working hours, no other abnormalities	The water temperature is too low.	Use warm water
	Error selecting function	Select the correct function

Abnormal alarm prompt

Prompt scheme		Reason statement	Suggested countermeasures
All lights flash once and sound once at the same time, with an interval of 3 seconds.	E1	No water alarm	Please refer to the water level of the cup to add food and water correctly or send them to after-sales service for maintenance.
All lights flash twice and sound twice at the same time, with an interval of 3 seconds.	E2	Initial water temperature high alarm	Please make sure the initial water temperature is not higher than 70°C or send it to after-sales service for maintenance.
All lights flash 3 times and sound 3 times at the same time, with an interval of 3 seconds.	E3	Anti-overflow abnormal alarm	Please add ingredients and water correctly according to the instructions or send them to after-sales service for repair.
All lights flash 4 times and sound 4 times at the same time, with an interval of 3 seconds	E4	Heating overtime alarm	
All lights flash 5 times and sound 5 times at the same time, with an interval of 3 seconds.	E5	Abnormal input voltage	Plug in the power again to confirm whether it is normal or send it to after-sales service for maintenance.
All lights flash 6 times and sound 6 times at the same time, with an interval of 3 seconds.	E6	Zero crossing signal loss alarm	
All lights flash 7 times and sound 7 times at the same time, with an interval of 3 seconds	E7	Abnormal communication alarm	
All lights flash 8 times and sound 8 times at the same time, with an interval of 3 seconds	E8	Abnormal temperature detection alarm	Send after-sales service and maintenance
All lights flash 9 times and sound 9 times at the same time, with an interval of 3 seconds	E9	Too much food or too high motor temperature	Please add ingredients and water correctly according to the instructions or send them to after-sales service for repair.

All lights flash 10 times and sound 10 times at the same time, with an interval of 3 seconds.	EA	Abnormal motherboard temperature detection	Send after-sales service and maintenance
---	----	--	--

Warm reminder

If the problem cannot be solved, do not disassemble the machine without permission, please send it to the local after-sales service department for repair.

If the above contents are not in conformity with the actual object due to the change of model or parts, please take the actual object as the standard without further notice, please understand!