


AUSTRALIA

Wall Outlet Installation Instuctions

Installation

- Check the threaded nipple (1) is the correct dimension as shown. Apply thread tape to the thread.
 Important: Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reducation in the water flow.
- 2. Fit o-ring (3) onto groove of connector (2). Screw connector (2) onto threaded nipple(1), then place flange (4) against wall/tile face, the holes of flange are at the bottom. Fit wall outlet onto spigot of connector in the correction as required. While the wall outlet (5) is held against flange (4), tighten screw (6) using hex key (7), see Fig2.
- 3. Check for leakage.

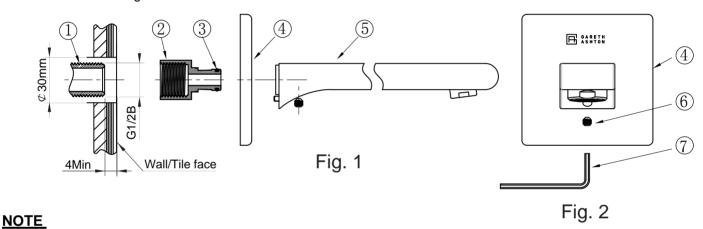

All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water. Note: Aerator insert housing must be retightened to prevent removal by hand.

Care and Maintenance

The materials and workmanship of this Tapware is of high quality and in order to maintain its appearance it is important not to wipe with abrasive cleaners. Cleaning of this product should only be done with warm soapy water on a regular basis.