




AUSTRALIA

## Wall Outlet Installation Instructions

### Installation

1. Check the threaded nipple (1) is the correct length, as shown. Apply thread tape to the thread.  
Important: Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in the water flow.
2. Fit o-ring (3) into groove of flange (2) . Slide flange (2) to the inlet of wall outlet (4) , then screw wall outlet (4) followed by flange (2) onto the threaded nipple (1) and position them as required. Do not over tighten.
3. Check for leakage.

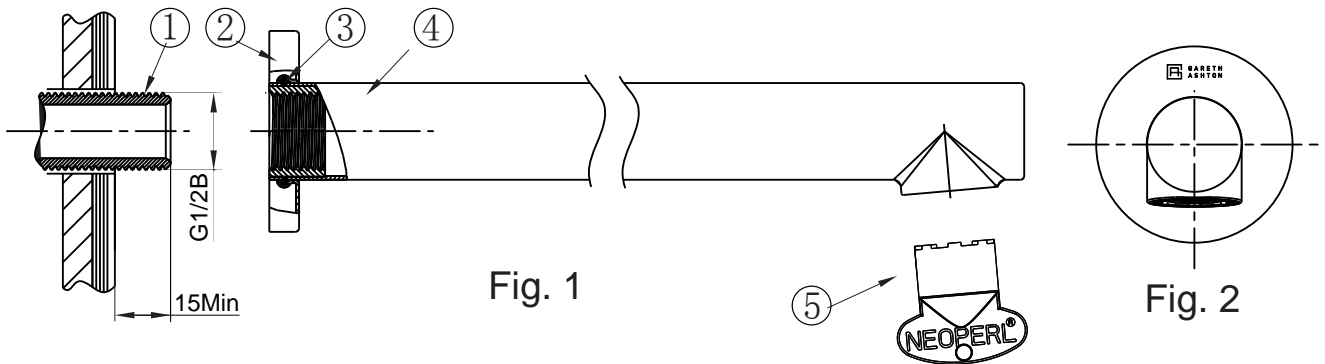

### NOTE

All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water. Note: Aerator insert housing must be retightened to prevent removal by hand.

### Care and Maintenance

The materials and workmanship of this Tapware is of high quality and in order to maintain its appearance it is important not to wipe with abrasive cleaners. Cleaning of this product should only be done with warm soapy water on a regular basis.