


Guidelines:

1. Apply a suitable sealant to the underside of the sink flange/rim.
2. Place the sink into the bench top opening.
3. If benchtop thickness (A) is $\geq 30\text{mm}$:
 - a. Insert the Thumb Screw (3) through the bracket (1) by approximately 5mm.
 - b. Slide the Bracket (1) fully into the bowl wall slot.
 - c. Repeat step "b" for all clips.
 - d. Ensure the sink is in the centre of the opening.
 - e. Rotate Thumb Screws (3) until all clips are firmly up against the underside of the bench, and then retighten in an opposed diagonal pattern.
 - f. **CAUTION:** Only tighten until the sink is securely against the bench. Don't use tools to tighten screws as this could damage the sink or benchtop.
4. If Bench Top Thickness (A) is $< 30\text{mm}$:
 - a. Insert the Thumb Screw (3) through the bracket (1) by approximately 5mm.
 - b. Slide the Bracket (1) fully into the bowl wall slot.
 - c. Screw the Extension (2) on to the end of the Thumb Screw (3).
 - d. Repeat step "c" for all clips.
 - e. Ensure the sink is in the centre of the opening.
 - f. Rotate Thumb Screws (3) until all clips are firmly up against the underside of the bench, and then retighten in an opposed diagonal pattern.
 - g. **CAUTION:** Only tighten until the sink is securely against the bench. Don't use tools to tighten screws as this could damage the sink or benchtop.

Inset Sink Installation Clip Set

Code: ICM

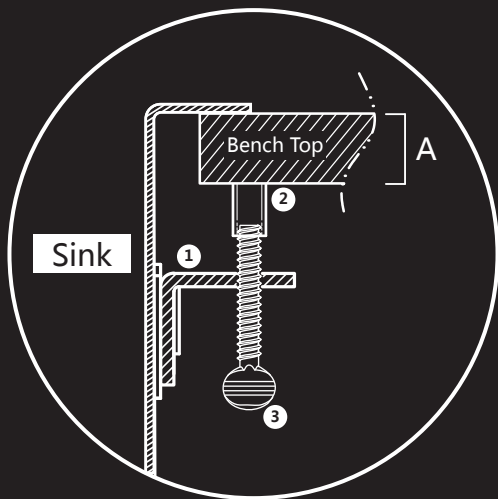

1



Bracket

2



Extension

3




Thumb Screw


UNDERMOUNT SINK

INSTALLATION INSTRUCTIONS

1

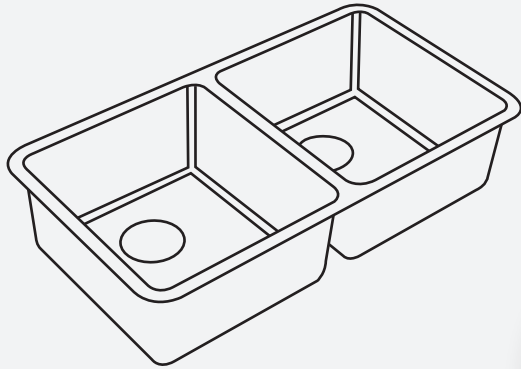


2

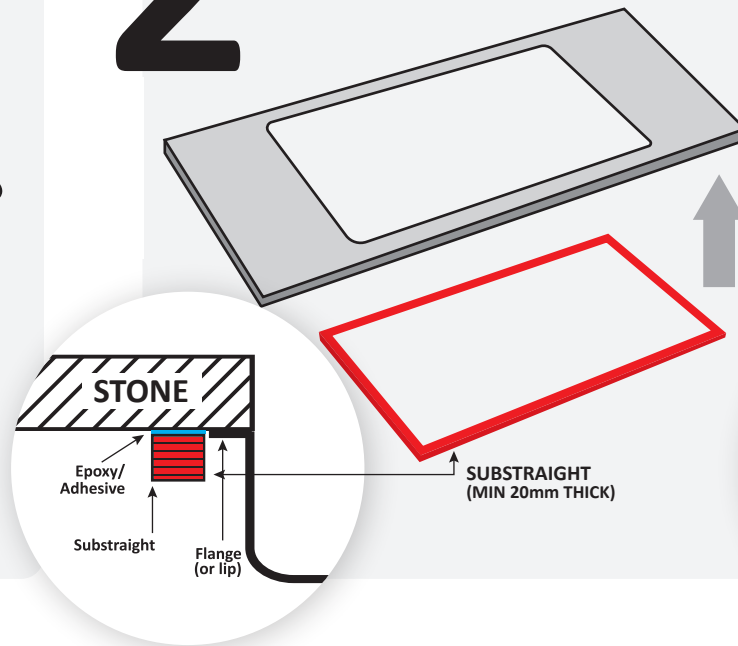

Attach substraight under the bench around the perimeter of the benchtop cutout to accommodate the size of the sink.

3

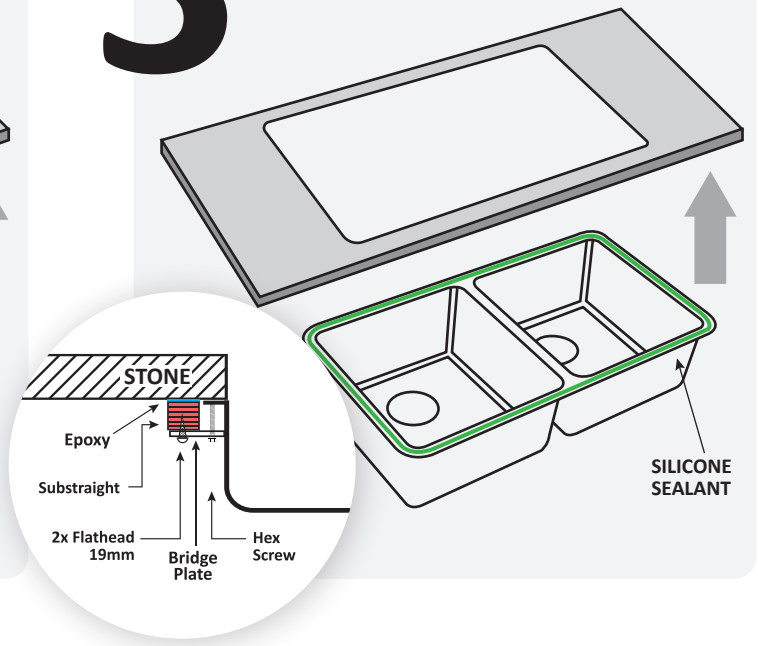

Clean the bottom of the countertop and the top flange (or lip) of the sink with methylated spirits. Then apply a bead of silicone to the top edge of the bowl. Position sink in place then screw the bridge plate to the substraight using the hex screws to secure the sink in correct position.

Templates are supplied only as a guide. The physical use of the sink will ensure a more accurate cutout. Abey recommends that undermount sinks and routing of your solid surface material should be installed by a professional installer for best results. Warranty is voided if epoxy or adhesive is used to secure the sink to the bench.

Abey^{AU}