



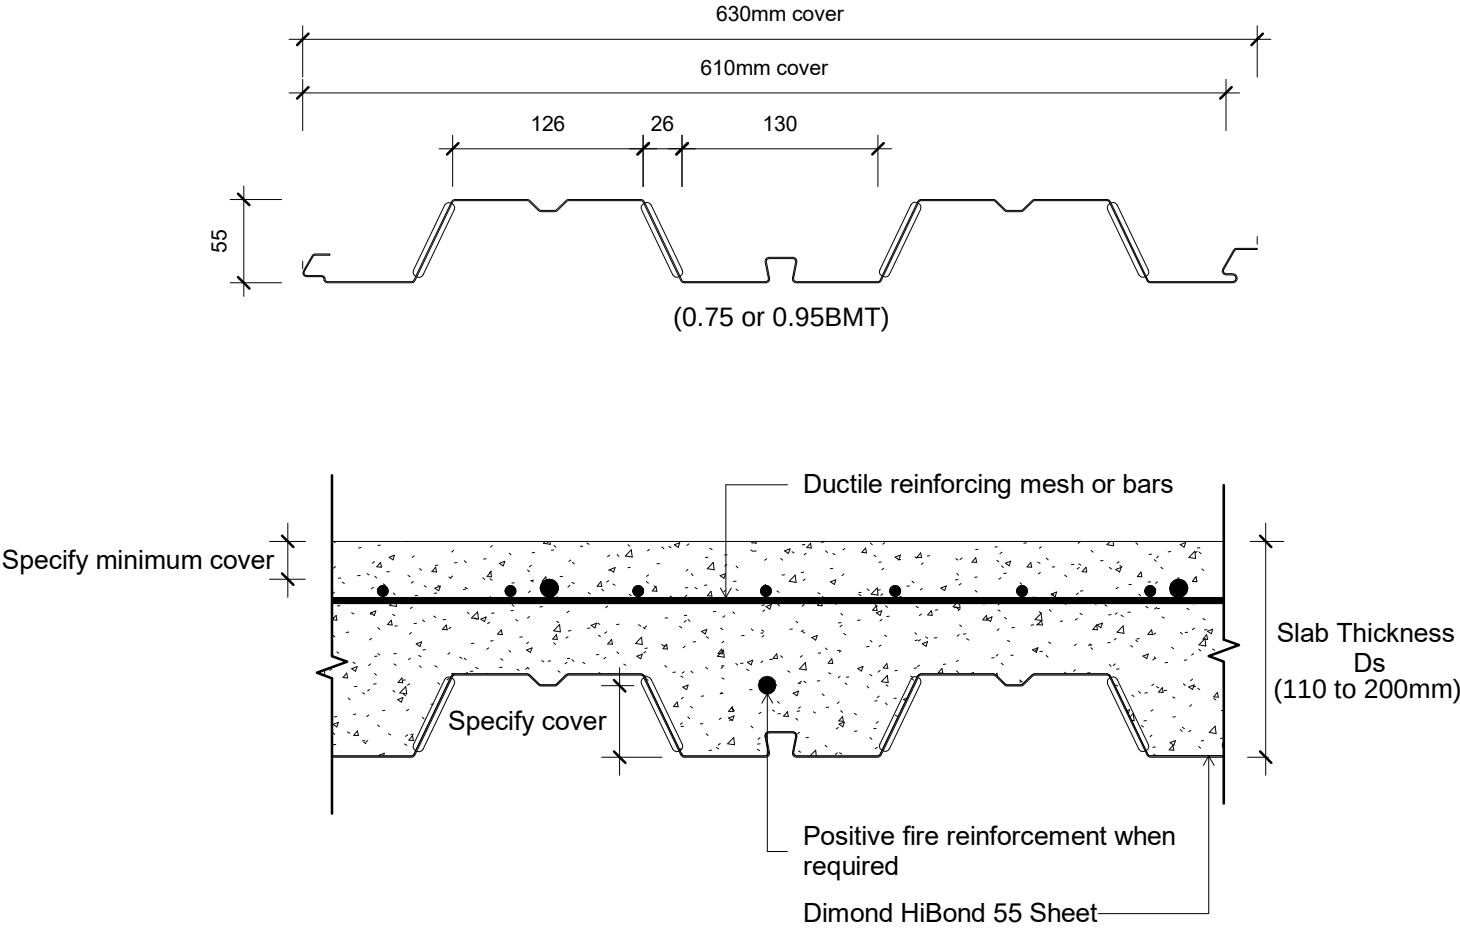


Original Size A4

Issue: 02	
Scale: 1 : 5	Reference dim_drv_h55_1010
Date: 31 March 2026	

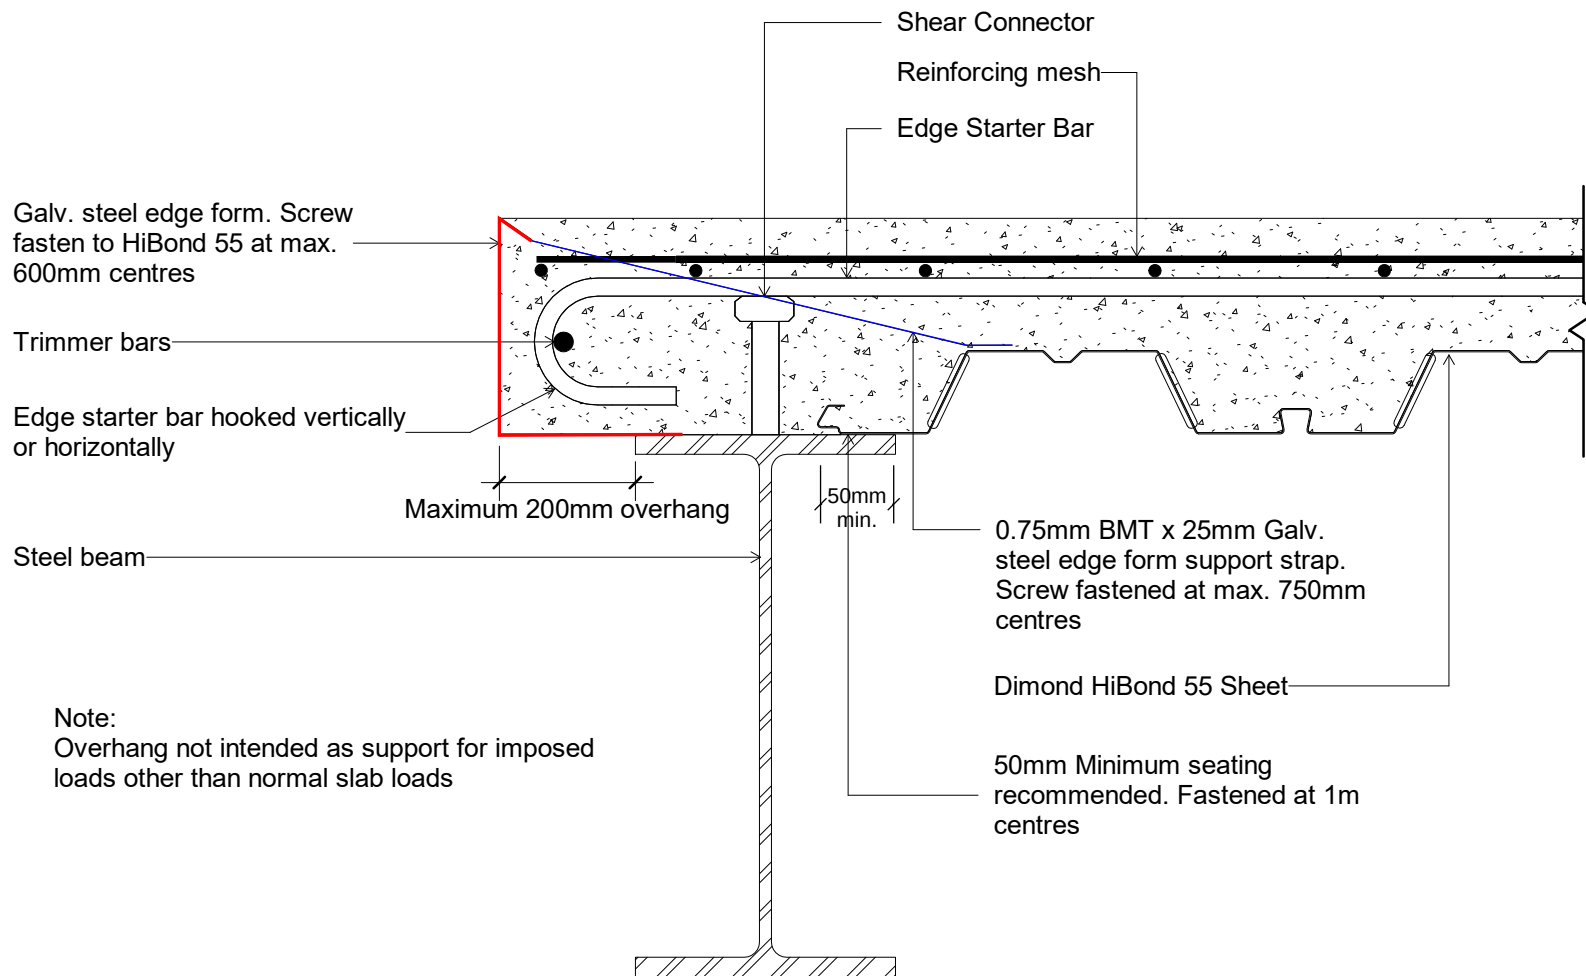


Original Size A4

Issue: 02	
Scale: 1 : 5	Reference dim_drv_h55_1020
Date: 31 March 2026	

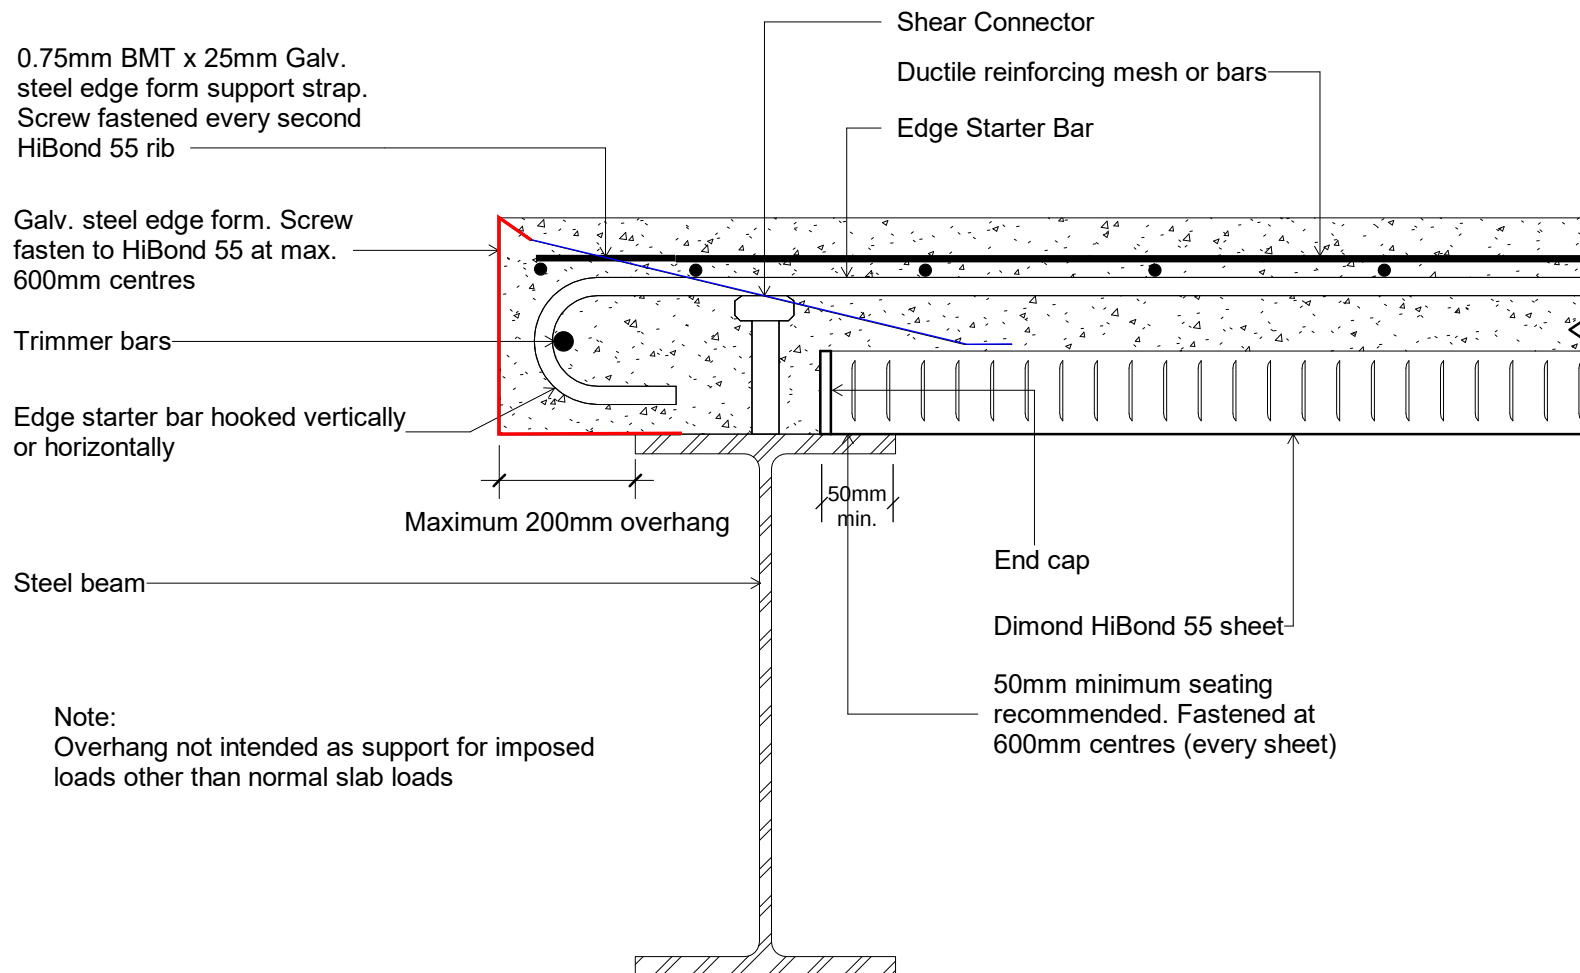


Original Size A4

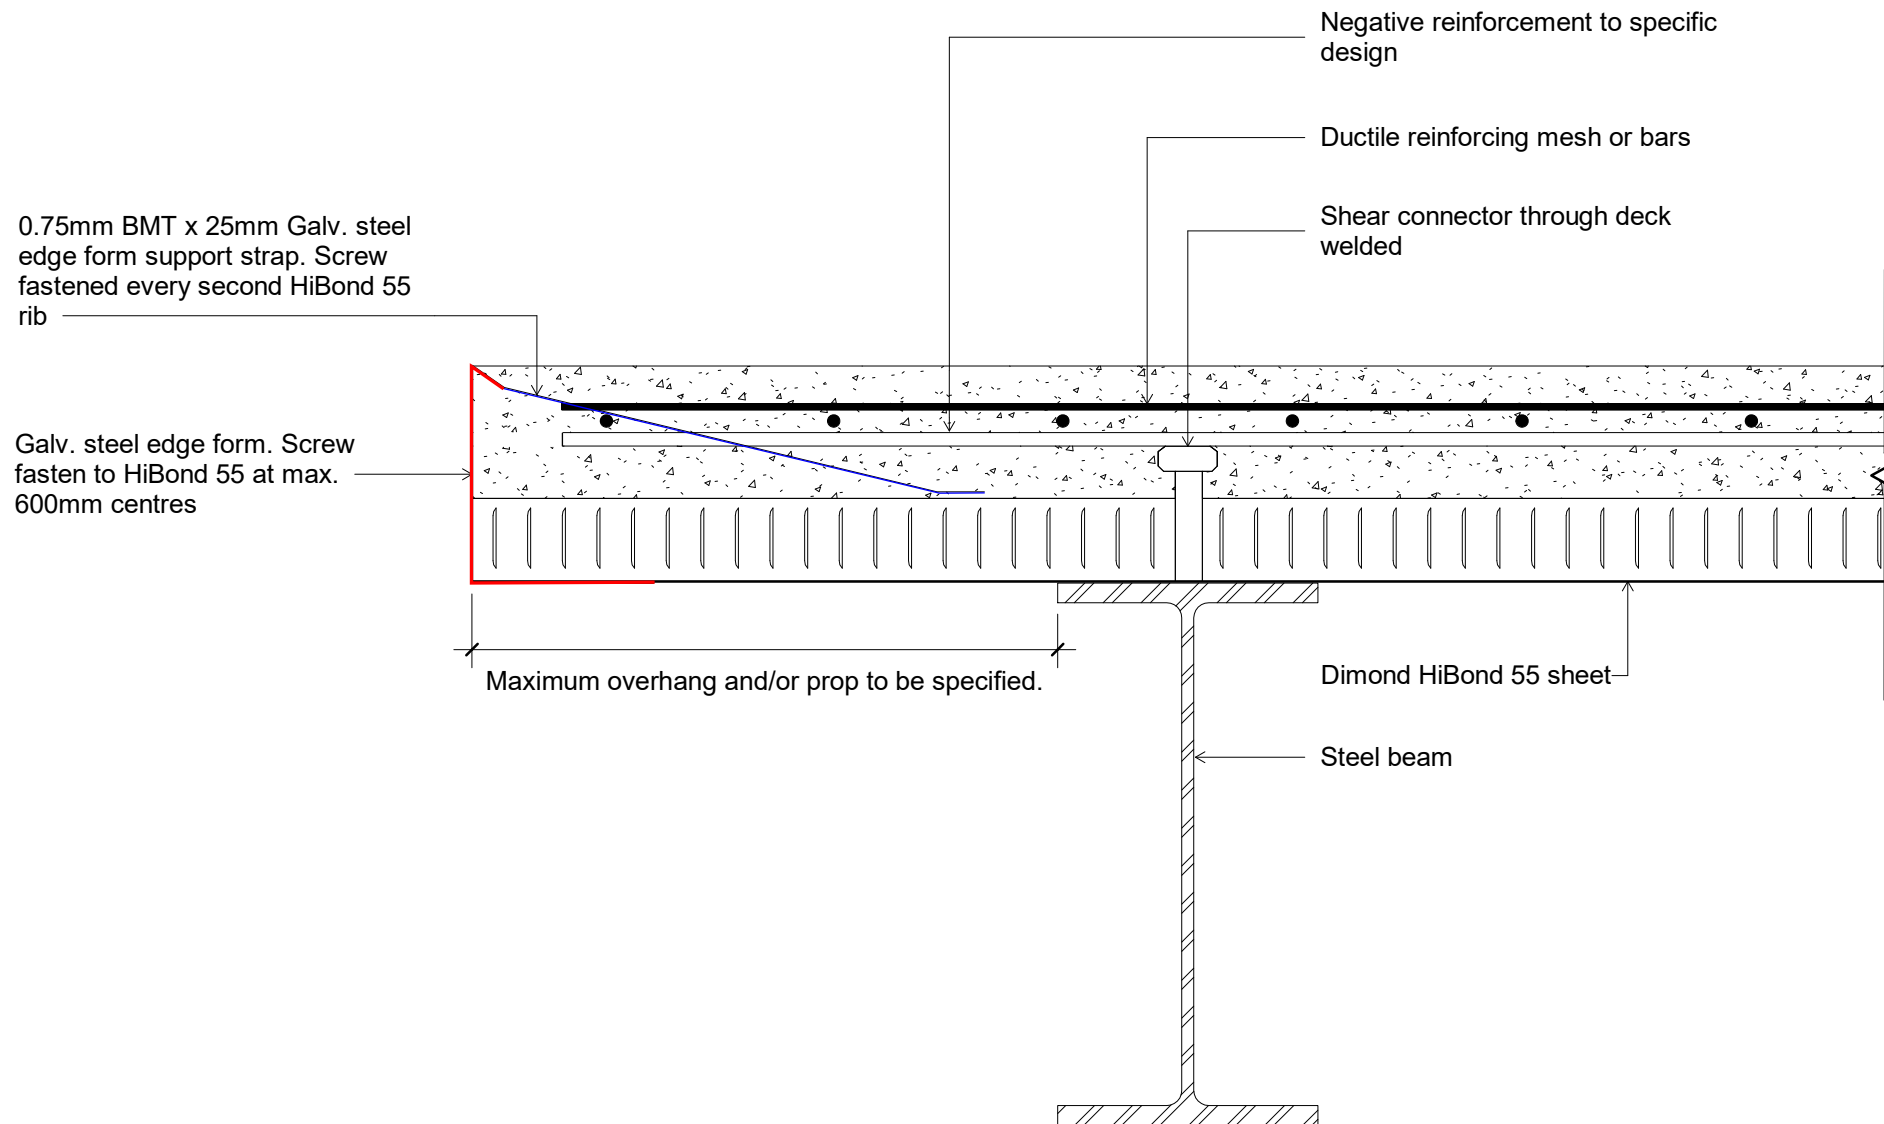


Original Size A4

Issue: 02	
Scale: 1 : 5	Reference dim_drv_h55_1040
Date: 31 March 2026	

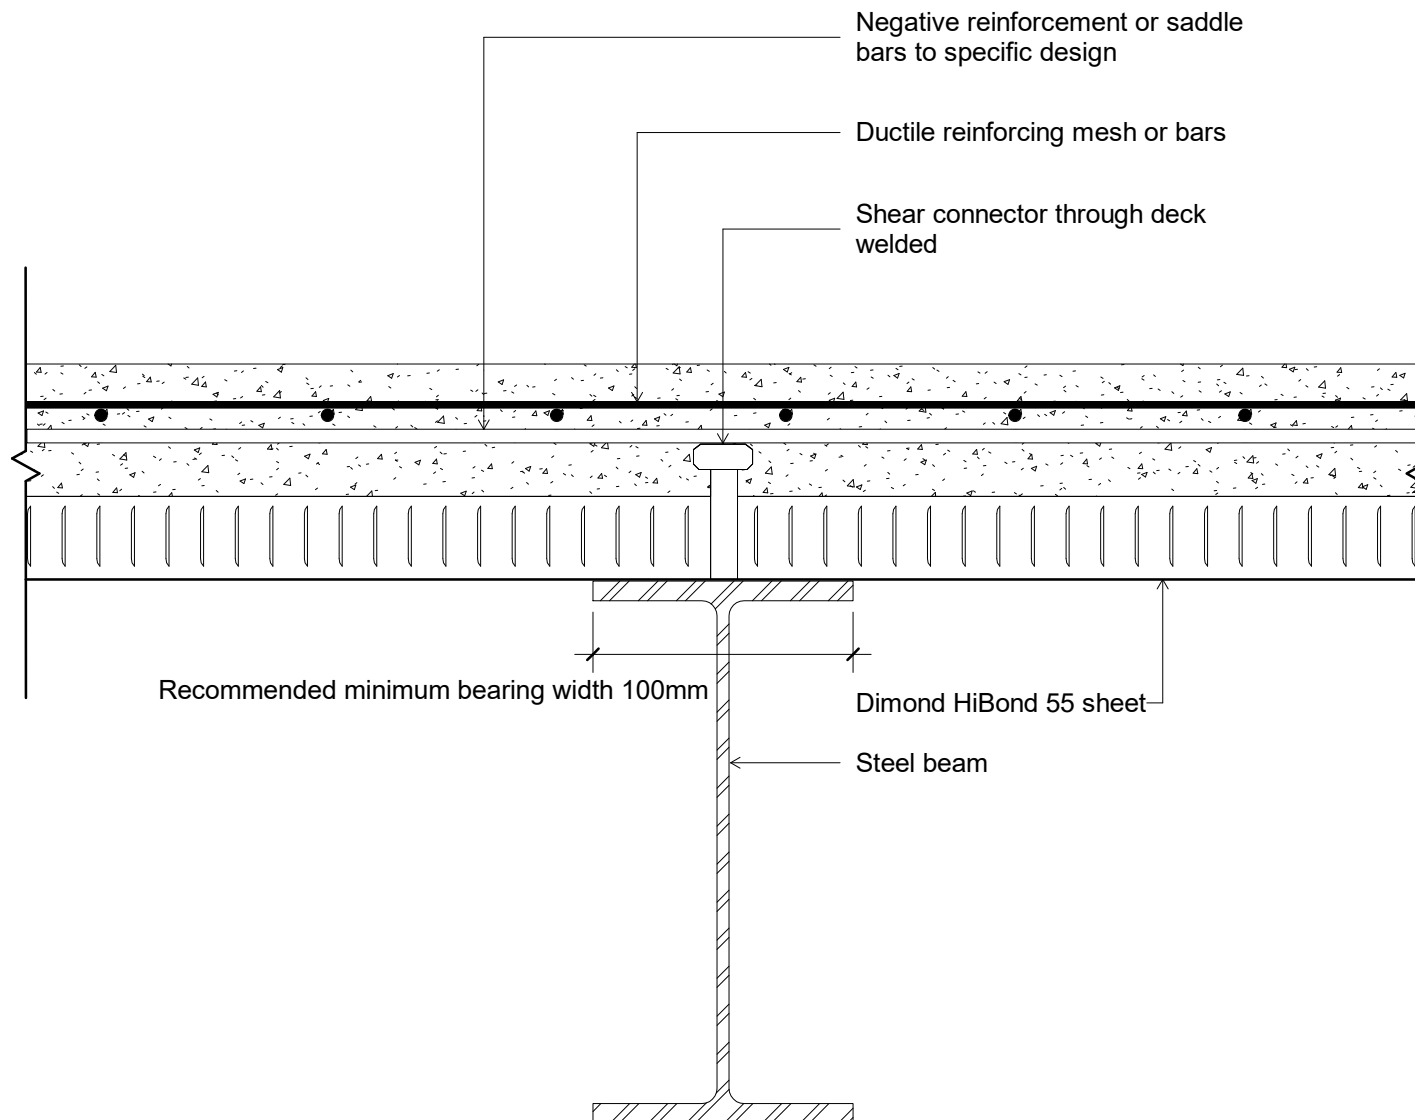


Original Size A4


Issue: 02	
Scale: 1 : 5	Reference dim_drv_h55_1050
Date: 31 March 2026	

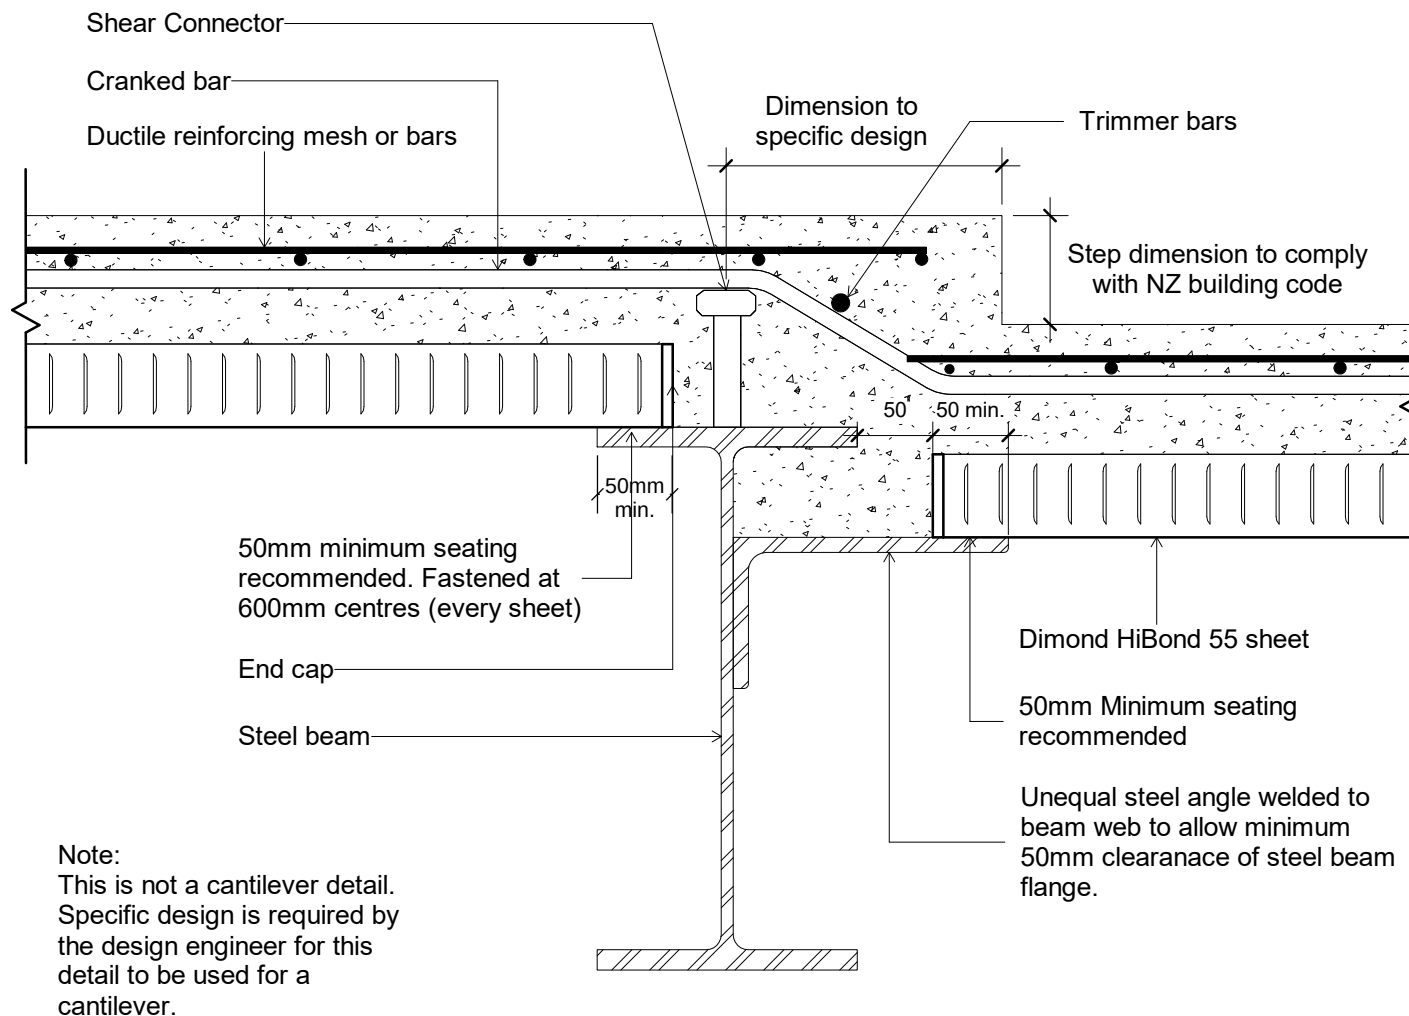

Original Size A4

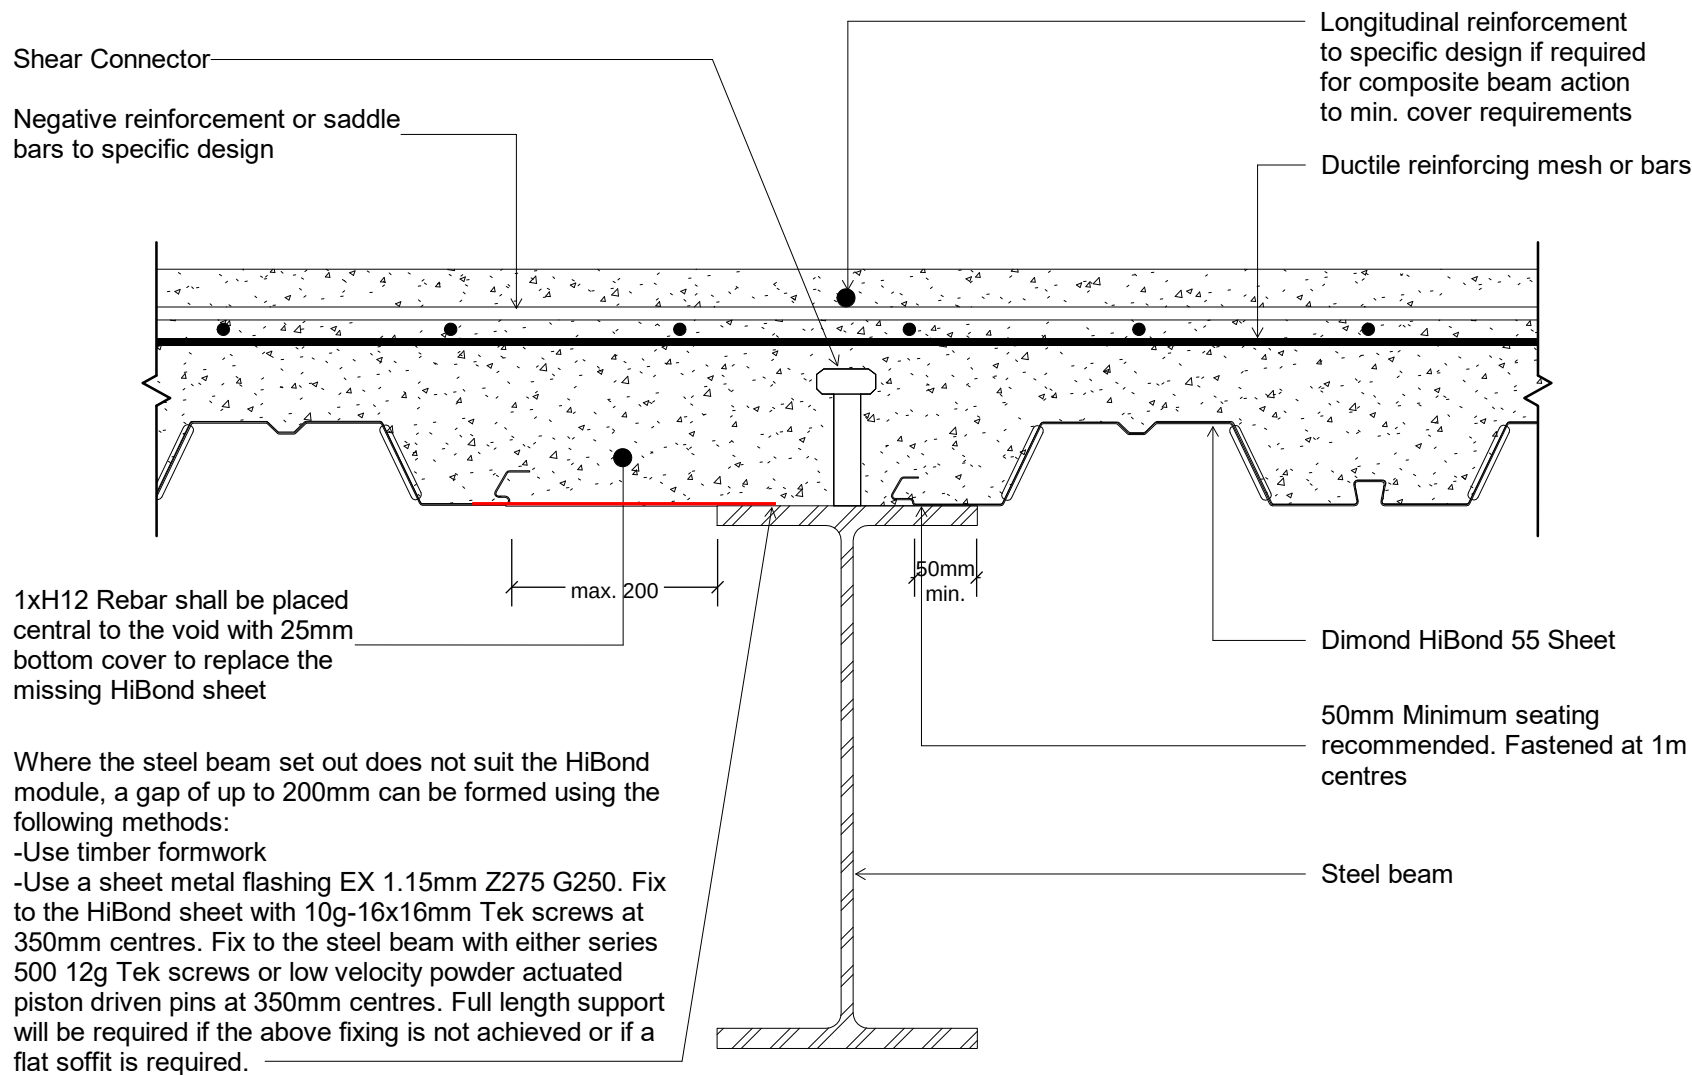


Original Size A4

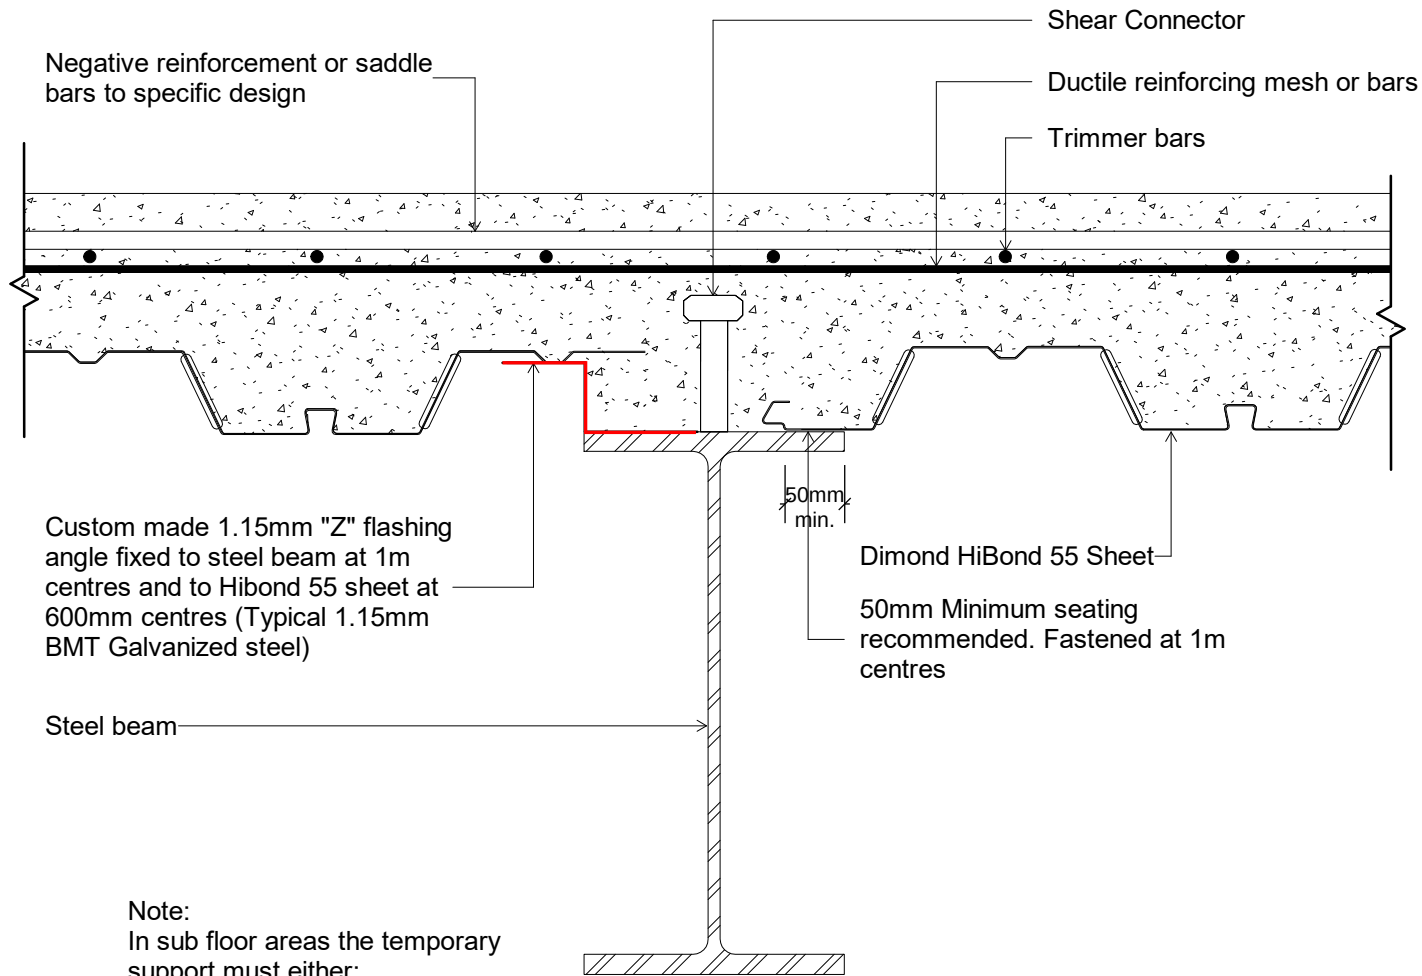

Note:
In sub floor areas the temporary support must either:
-Be removed 28 days after concrete pour or
-Have a DPC barrier between the trimmer and HiBond sheet


Original Size A4

Issue: 02	
Scale: 1 : 5	Reference dim_drv_h55_1080
Date: 31 March 2026	

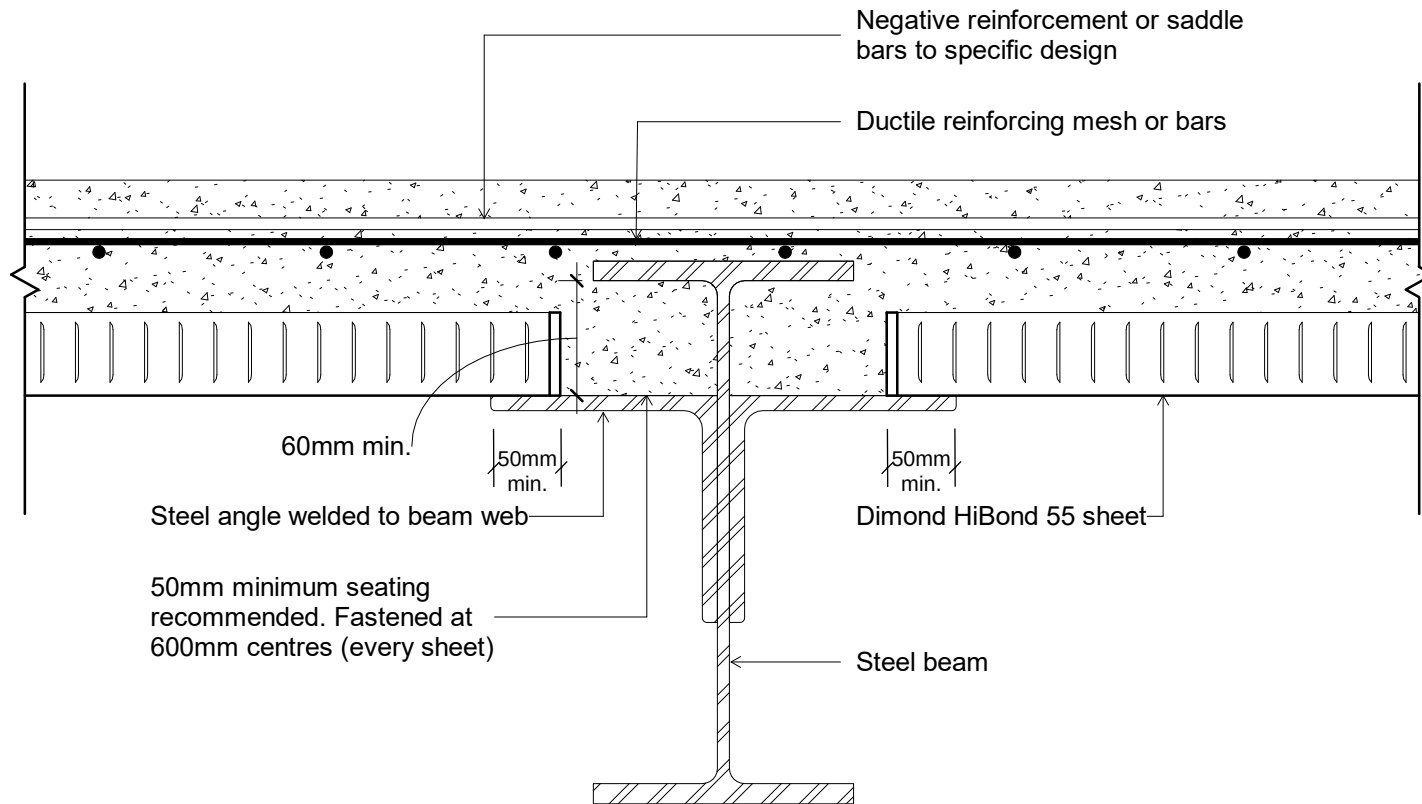


Original Size A4

Issue: 02	
Scale: 1 : 5	Reference dim_drv_h55_1090
Date: 31 March 2026	

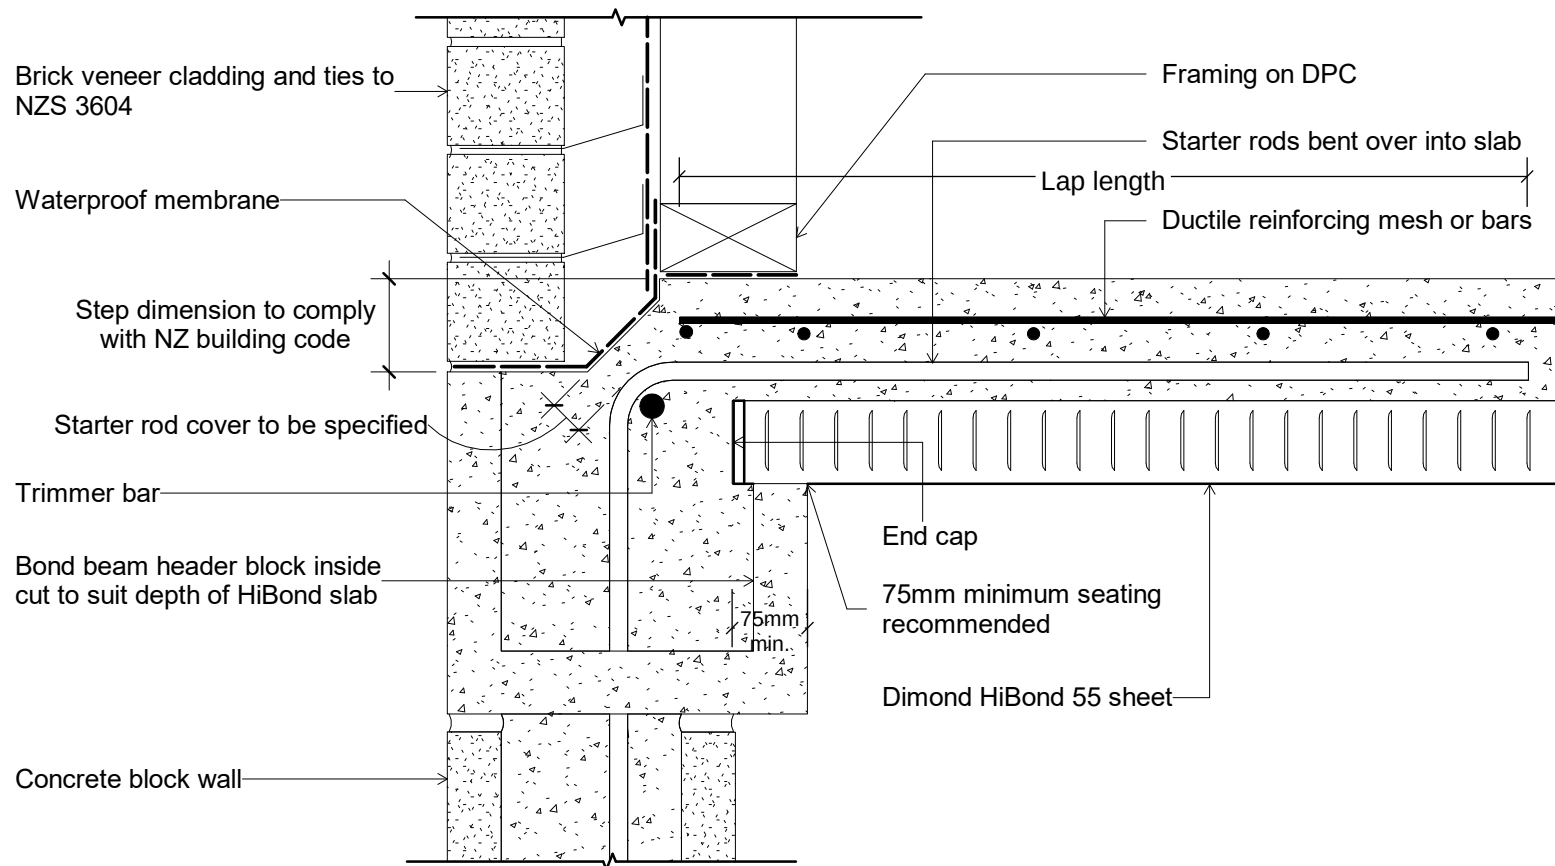


Original Size A4

Issue: 02	
Scale: 1 : 5	Reference dim_drv_h55_1100
Date: 31 March 2026	

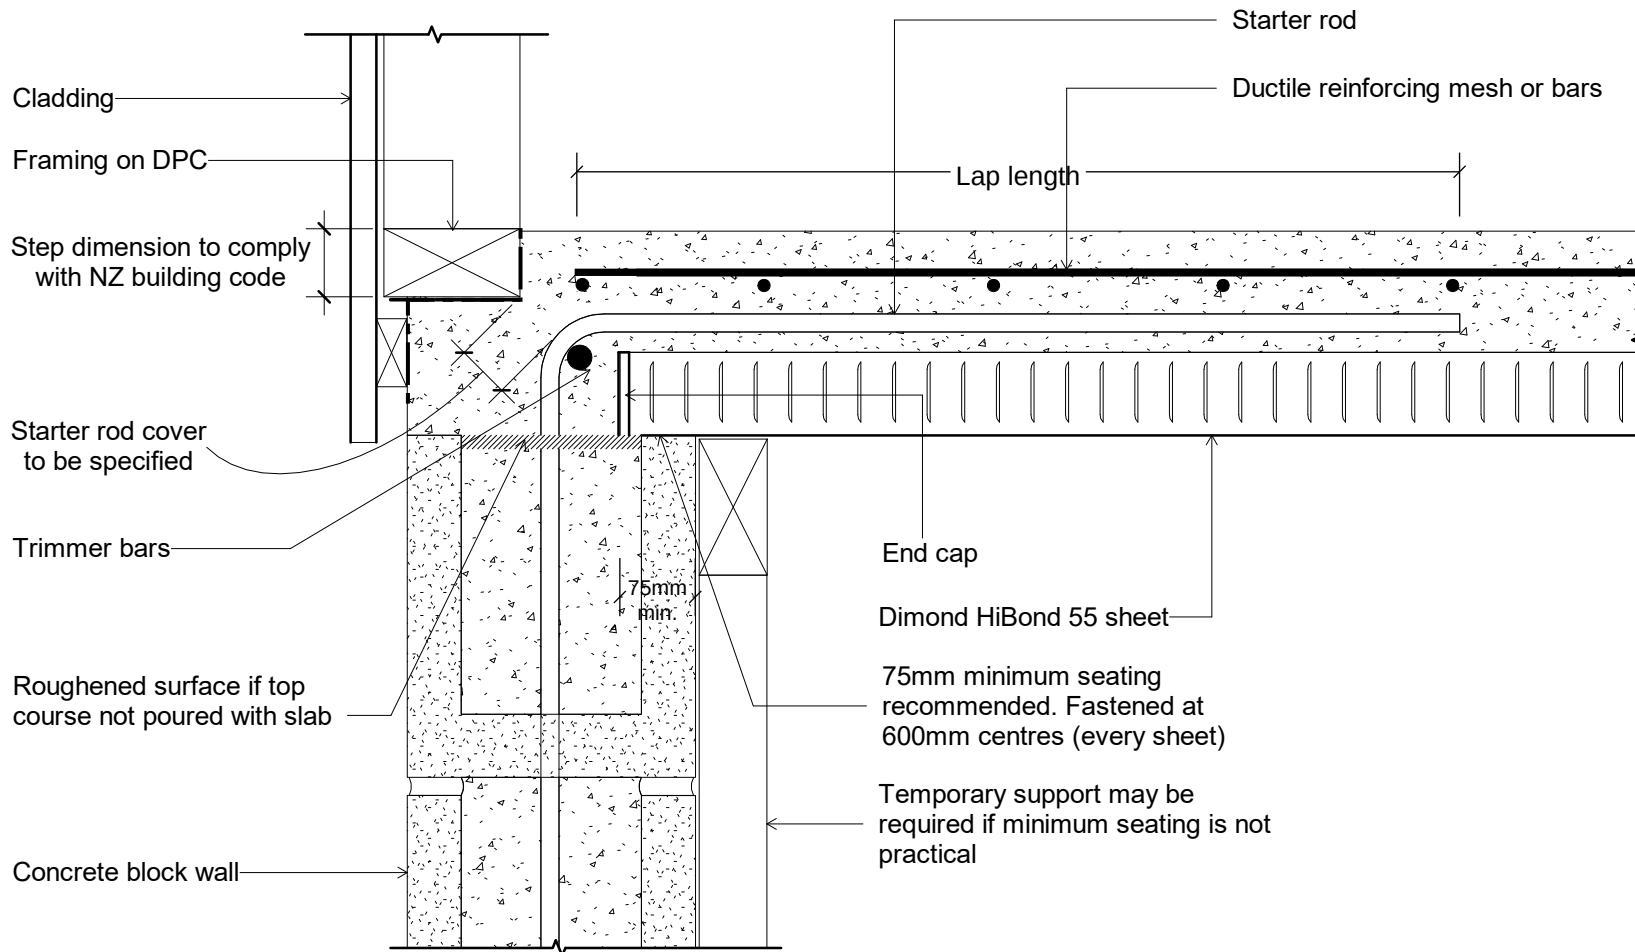


NOTE:
IN SUB FLOOR AREAS THE TEMPORARY SUPPORT MUST EITHER:
- BE REMOVED 28 DAYS AFTER THE CONCRETE POUR OR
- HAVE A DPC BARRIER BETWEEN THE TIMBER AND HIBOND SHEET.


Original Size A4

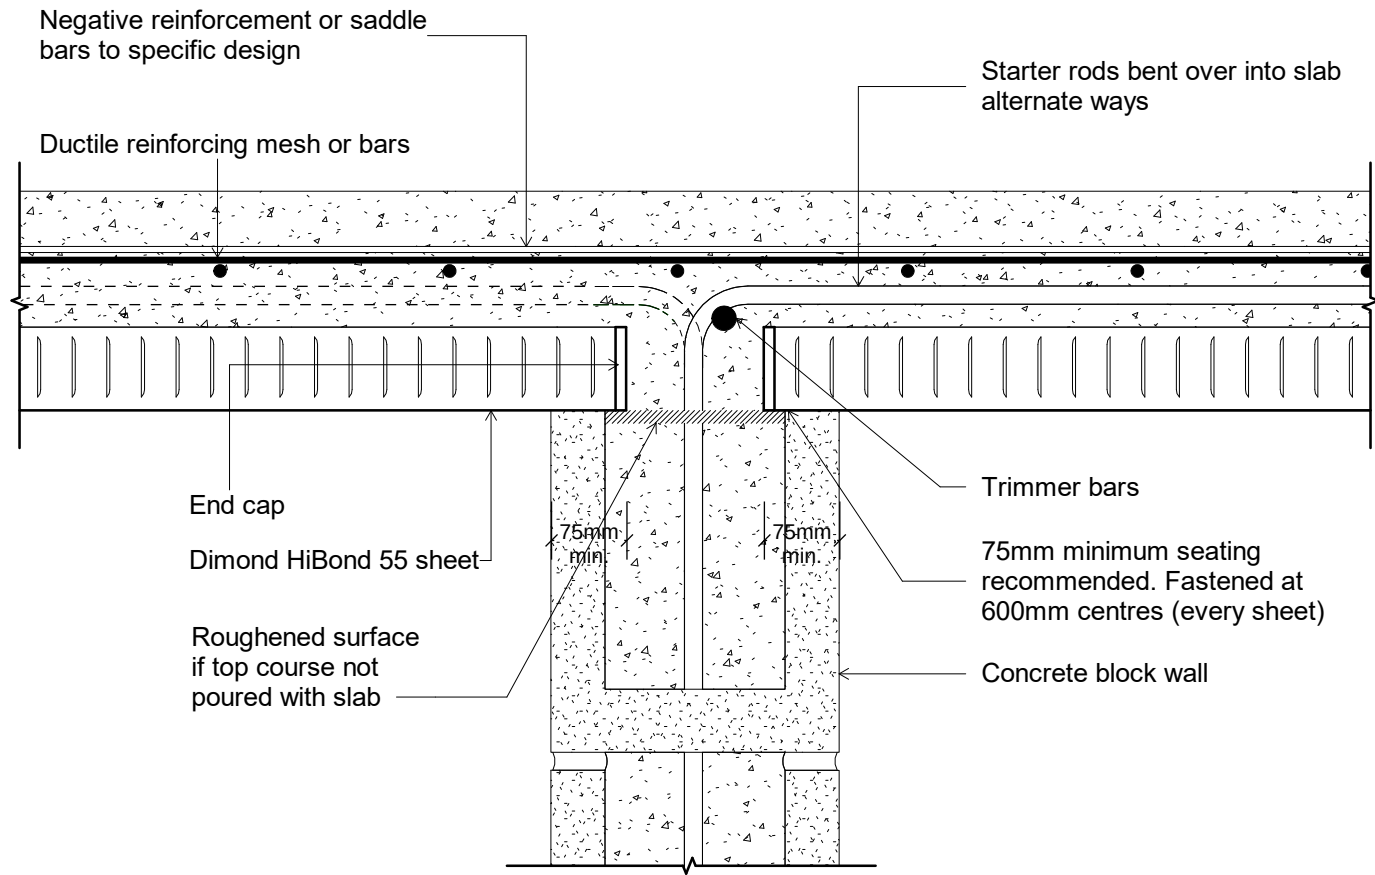

Original Size A4


Issue: 02	
Scale: 1 : 5	Reference dim_drv_h55_1120
Date: 31 March 2026	

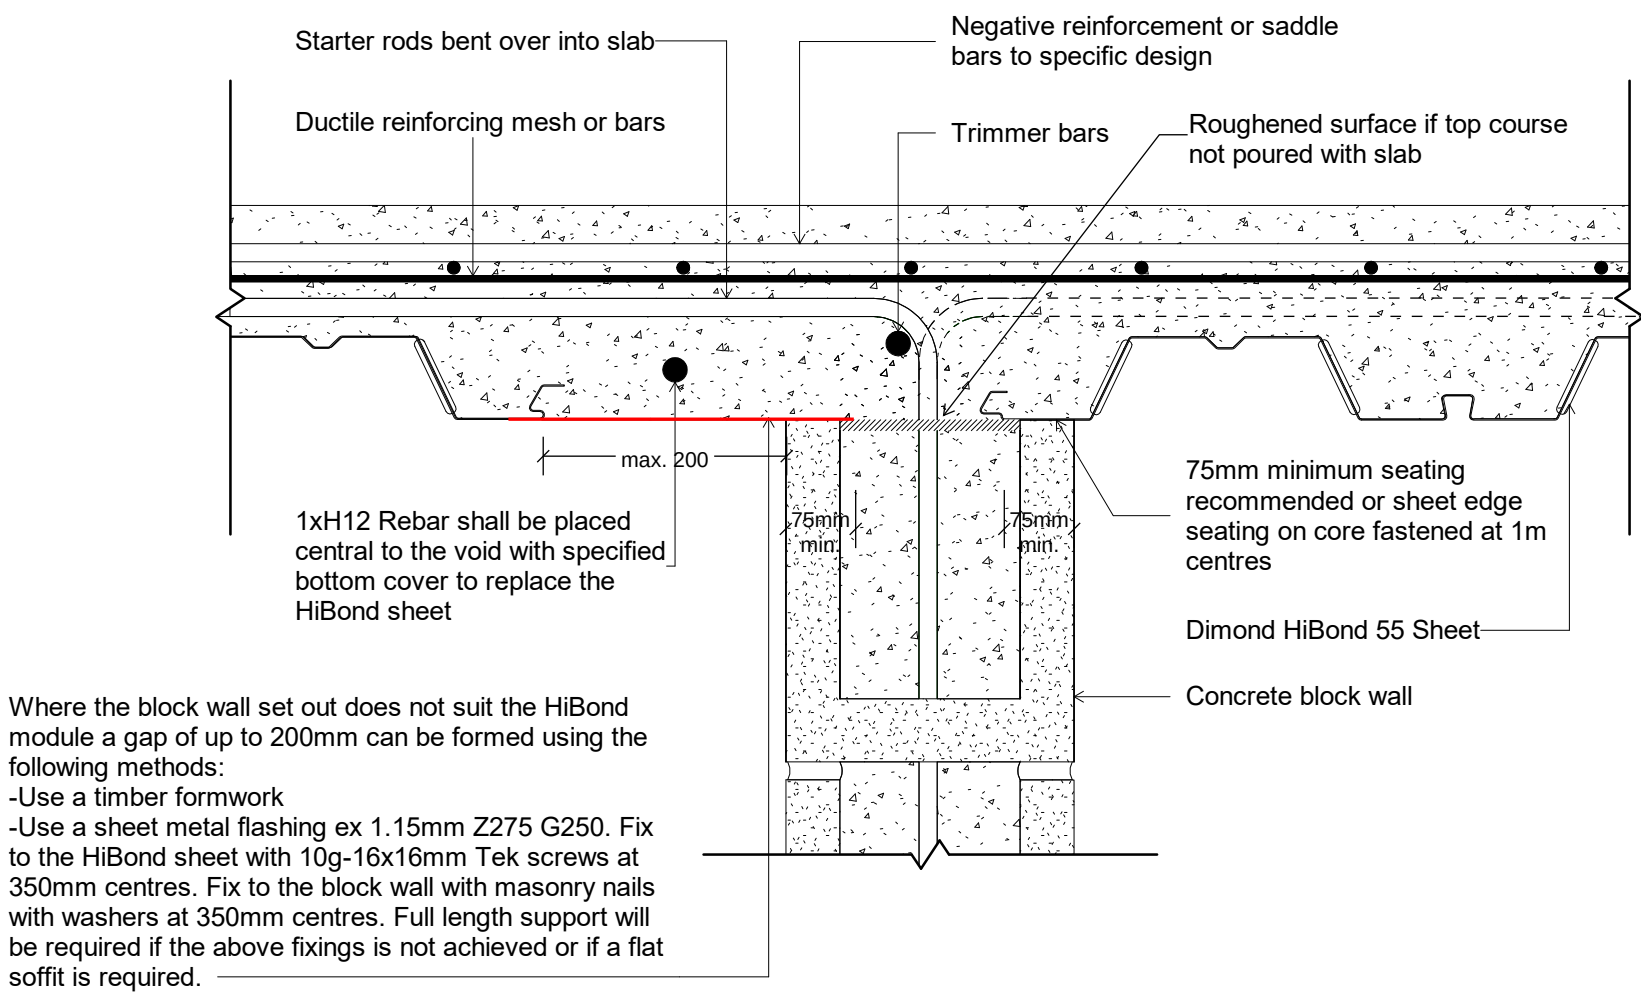

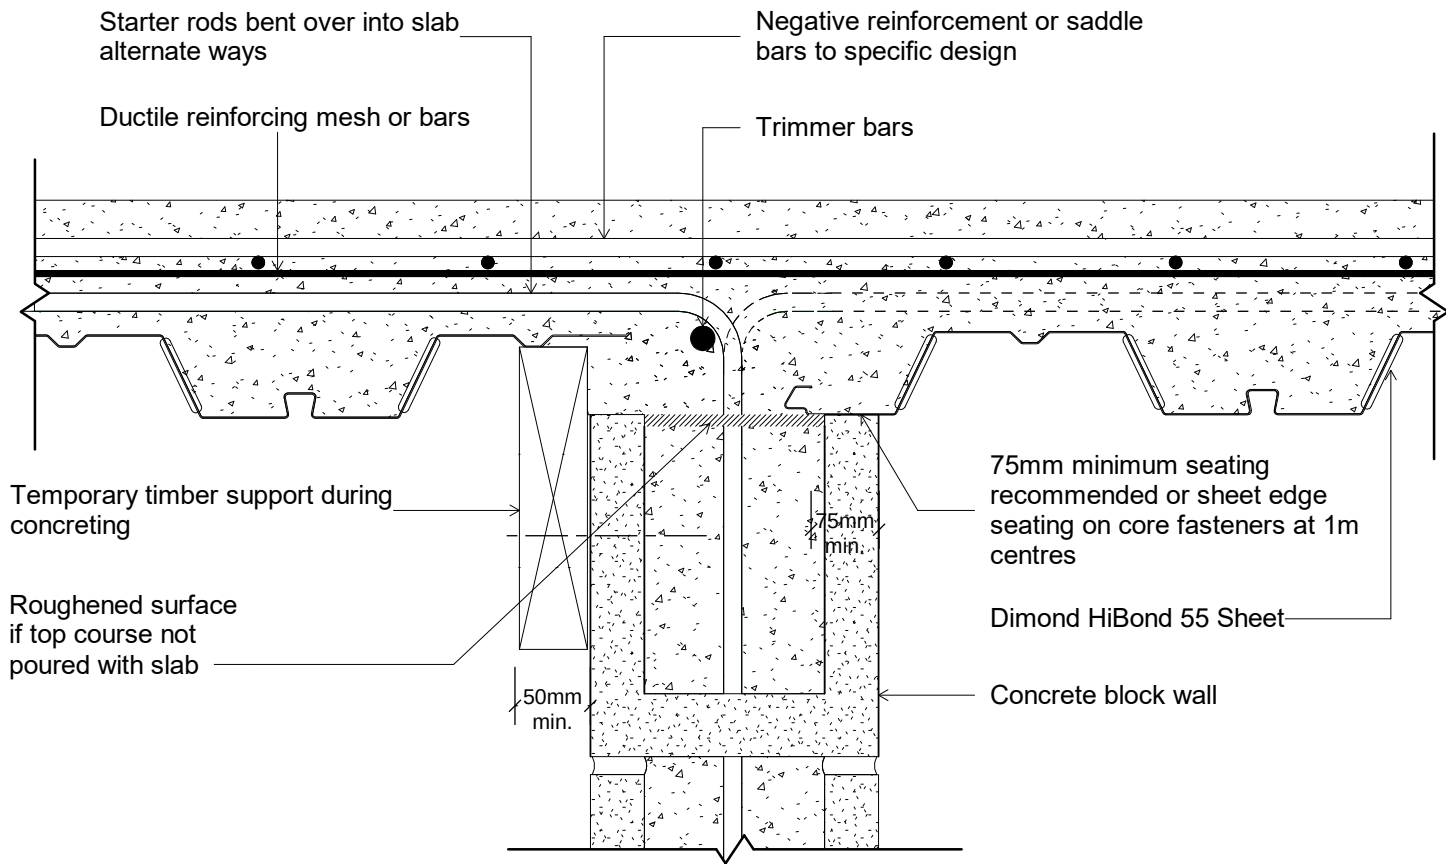


Note:
In sub floor areas the temporary support must either:
-Be removed 28 days after concrete pour or
-Have a DPC barrier between the timber and HiBond sheet.

Original Size A4

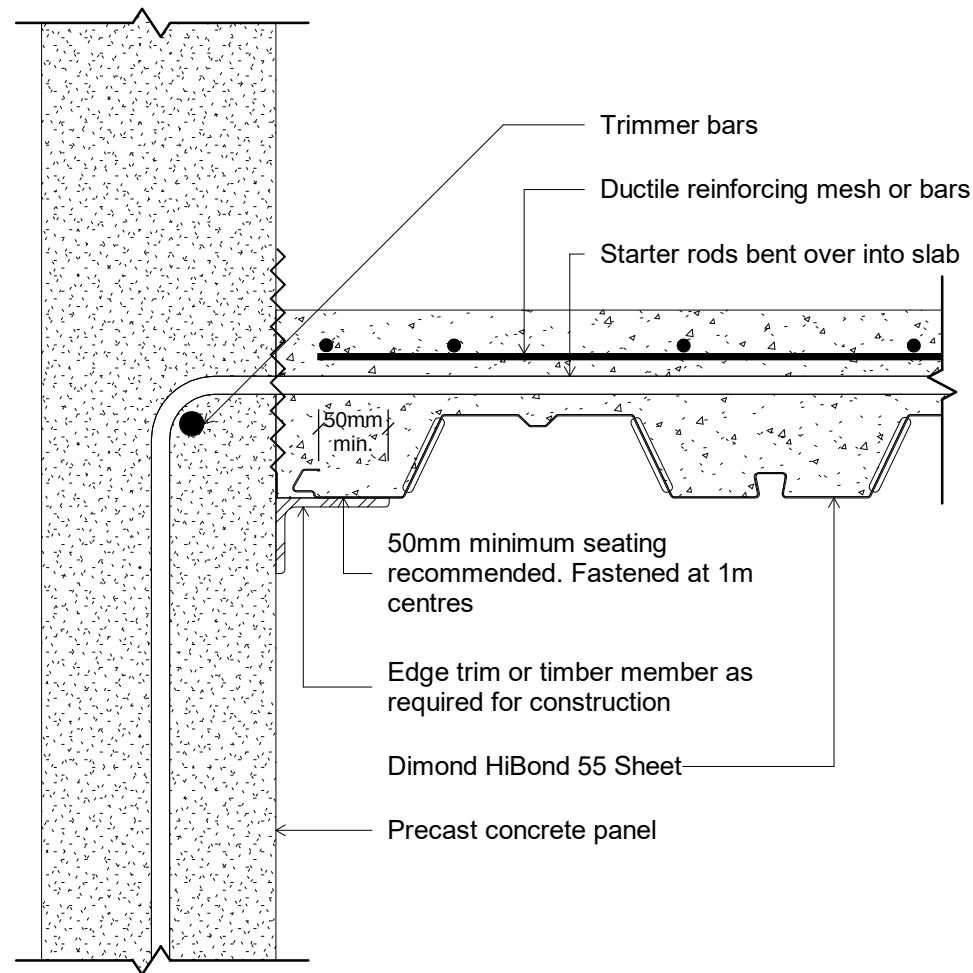

Original Size A4

Issue: 02	
Scale: 1 : 5	Reference dim_drv_h55_1150
Date: 31 March 2026	

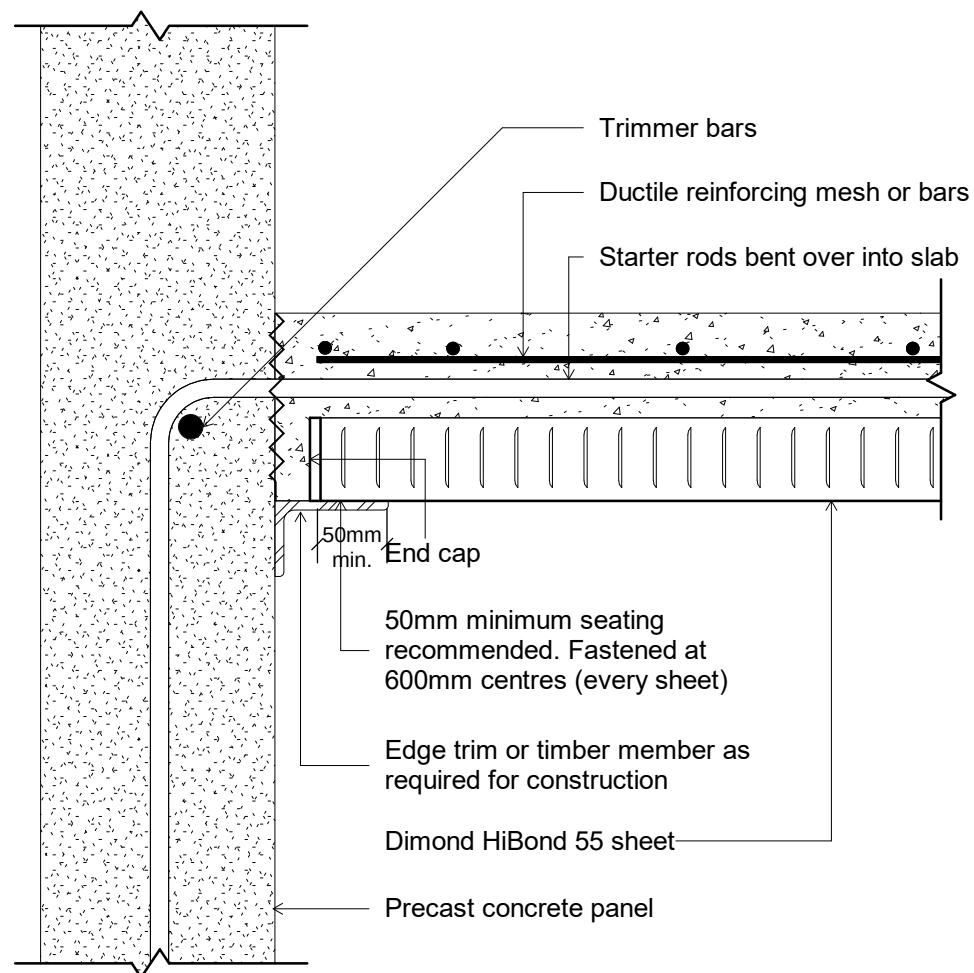

Original Size A4

Issue: 02	
Scale: 1 : 5	Reference dim_drv_h55_1160
Date: 31 March 2026	